


# Clean the flush valve



Loosen the cover screws.

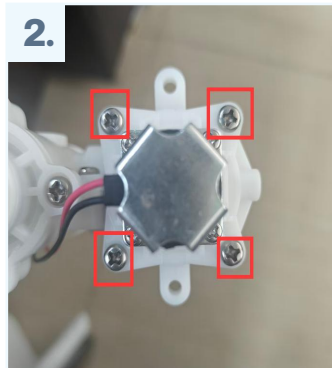

Loosen 4 screws of the solenoid valve.



You can see a spring coil and a rubber diaphragm inside.



Take them out and wash them thoroughly clean.




Then put them back.

**Note that the spring coil must be clamped onto the white retaining ring and inserted into the small round hole.**

**Otherwise, it will cause a flushing problem.**



Retighten the screws of the solenoid valve in the correct direction.

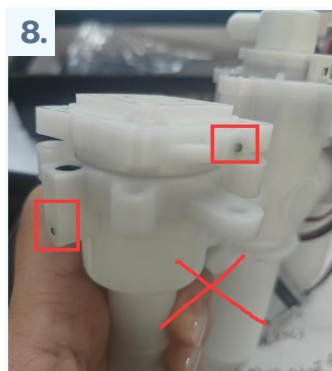

Retighten the screws in the wrong direction will cause a flushing problem.



Retighten the cover screws.

