



INSTALLATION INSTRUCTIONS

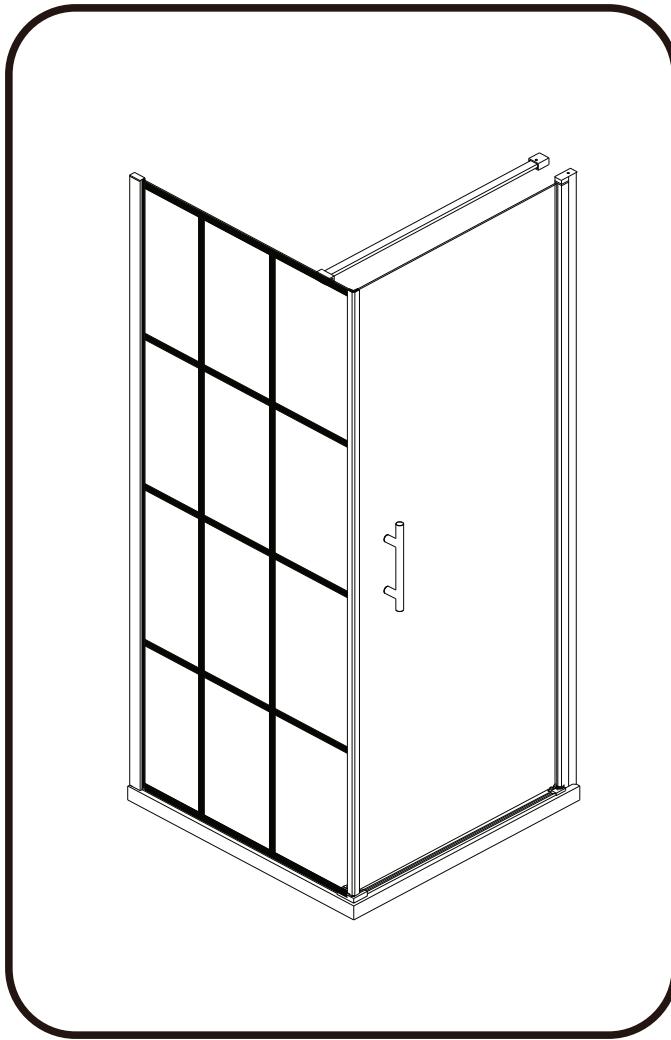


Tools Required




Drill




6mm Masonry Drill
3.2mm HSS Drill




Spirit level

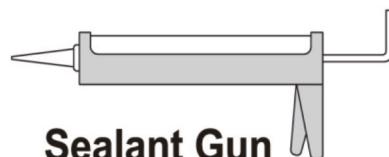

Sealant Gun



Tape Measure

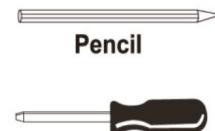

Pencil
PH2 TYPE
Screwdriver

Please note hand tools NOT supplied.

IMPORTANT


These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls. Hollow or stud-partition walls will require alternative fixings. Please consult with a reputable trades person or hardware supplier for the correct type of fixing.

It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.



MODEL : EDDA

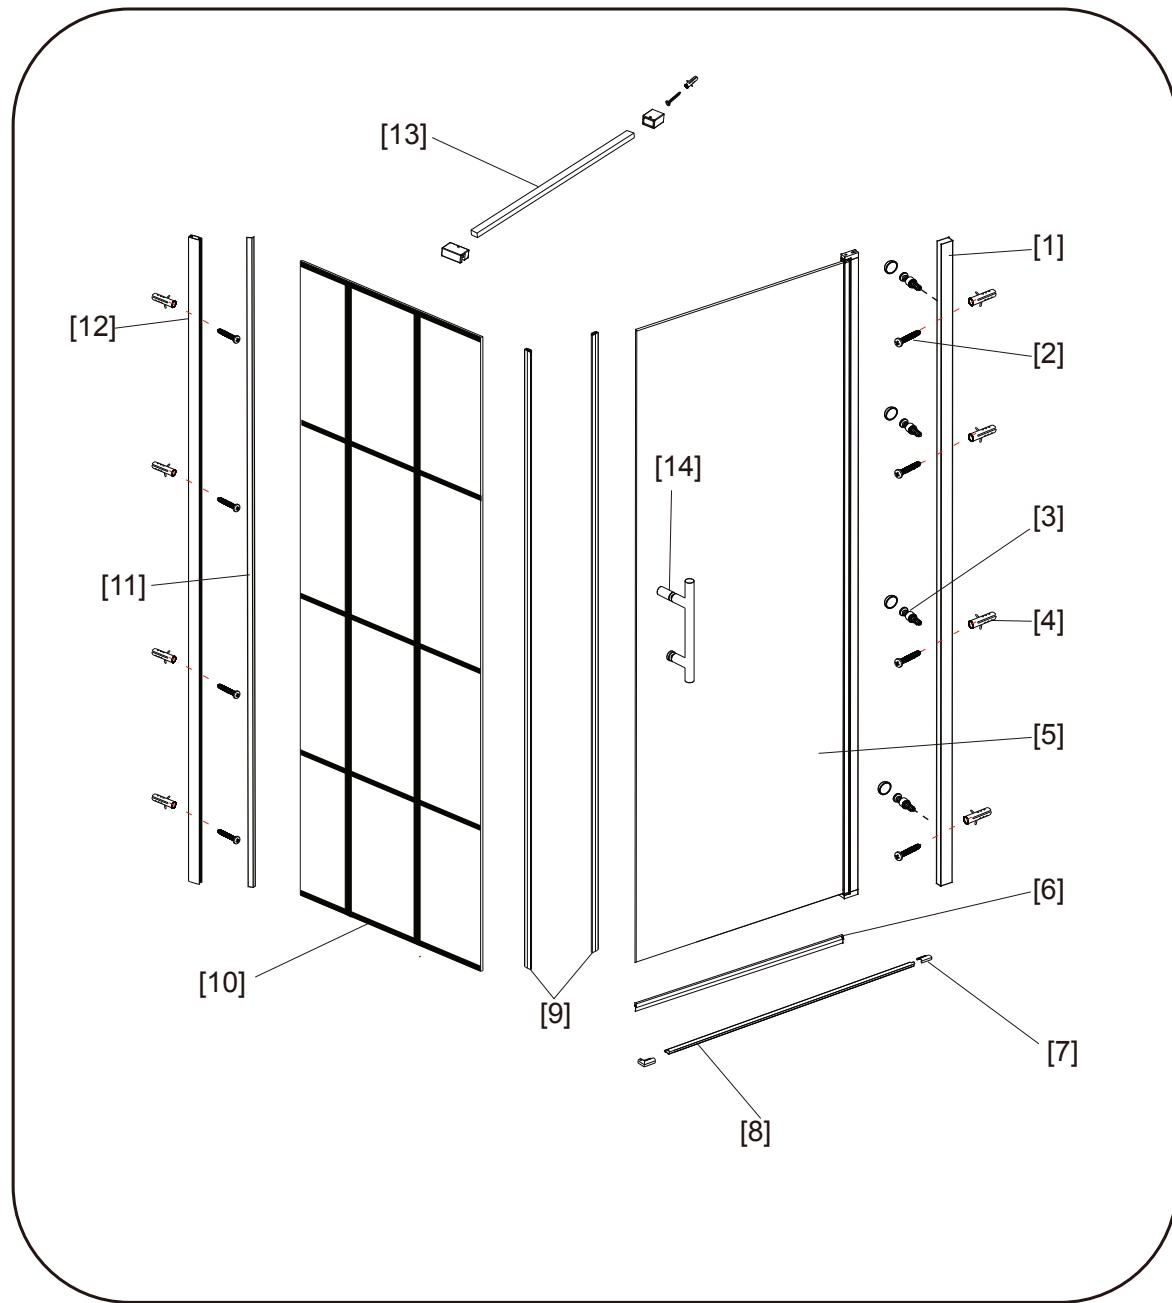


NO.	Description	Qty	NO.	Description	Qty
1	Wall Profile for Swing Door	1	8	Aluminium Bottom Strip	1
2	Screws M4x30	9	9	Closing Magnetic Seals	1
3	Screws M4x10 with Cover Caps	4	10	Side Panel	1
4	Wall Plugs	9	11	T Seal	1
5	Swing Door	1	12	Wall Profile for Side Panel	1
6	Door Bottom Seal	1	13	Support Bar	1
7	End Caps for Bottom Strip	2	14	Handle	1





MODEL : EDDA

INSTALLATION STEPS


Step 1

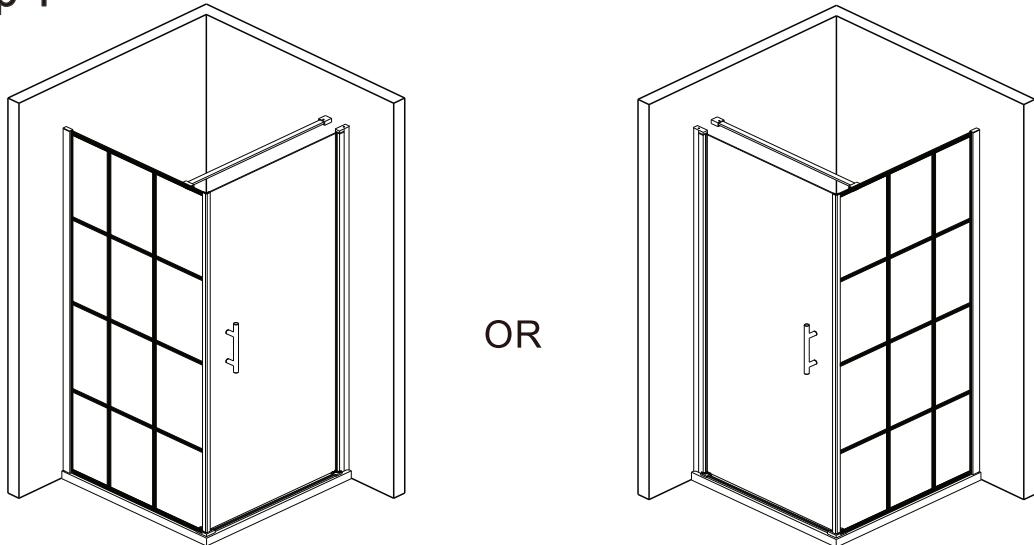


Step 2

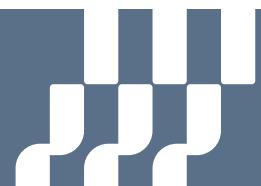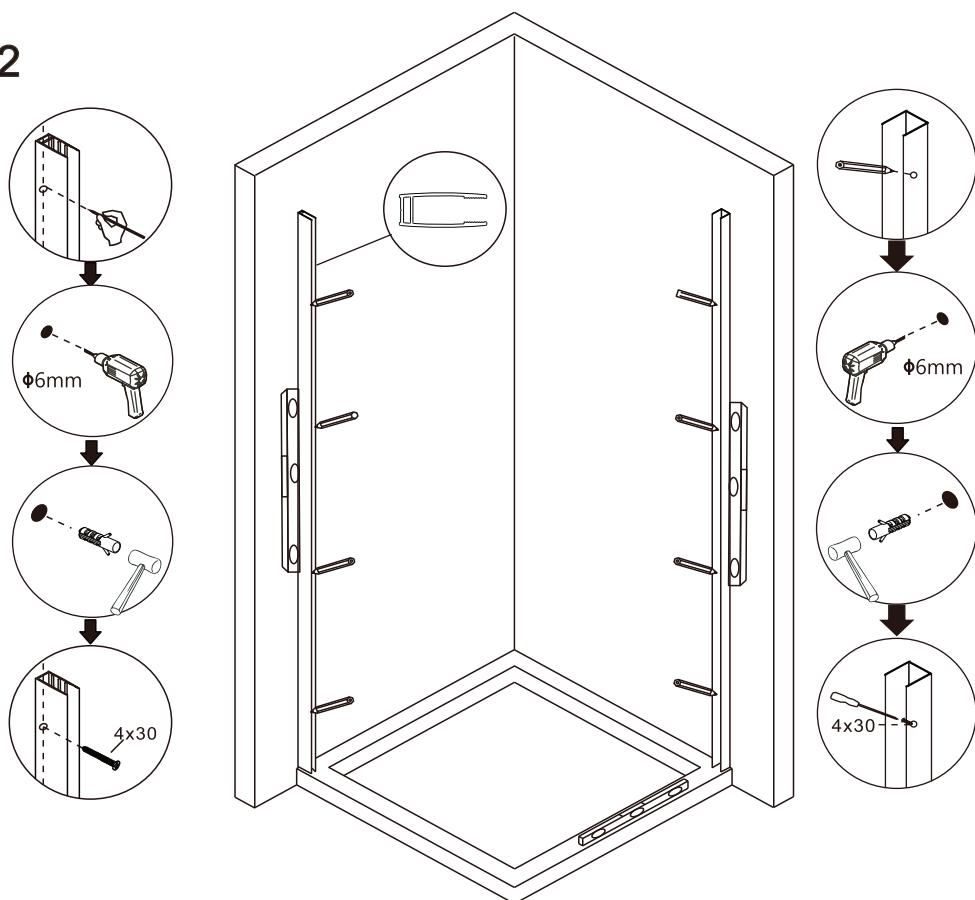

Step 3

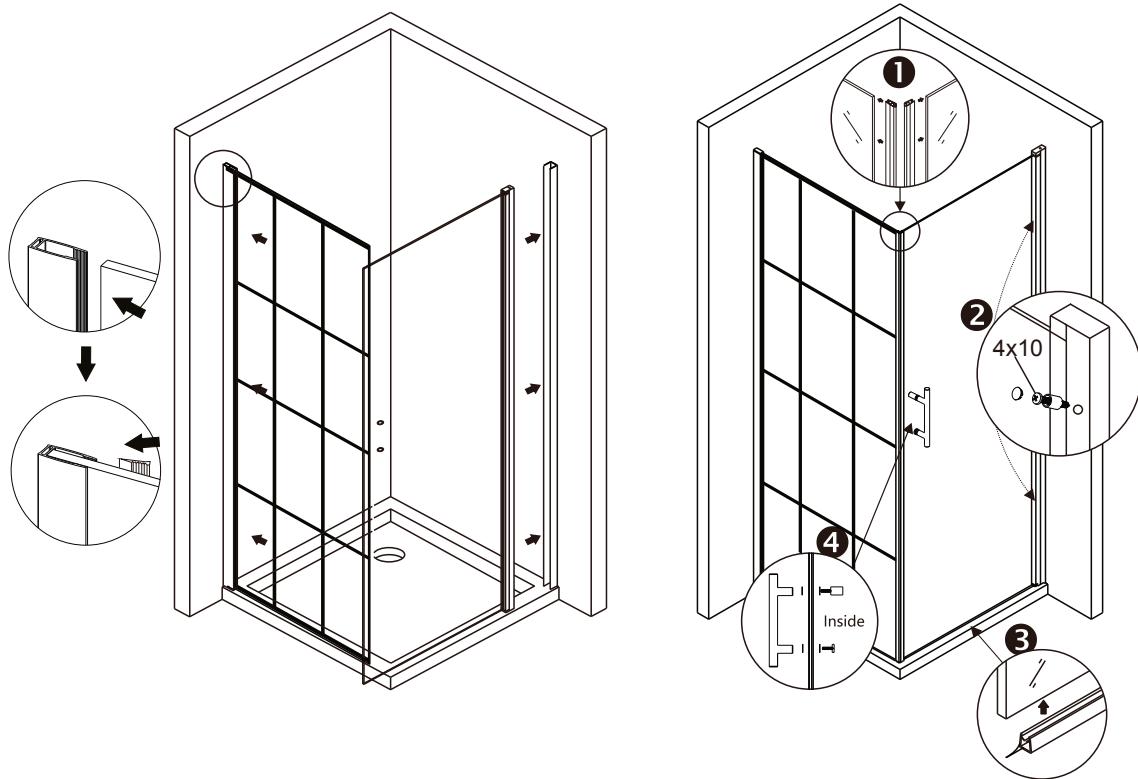


Step 4

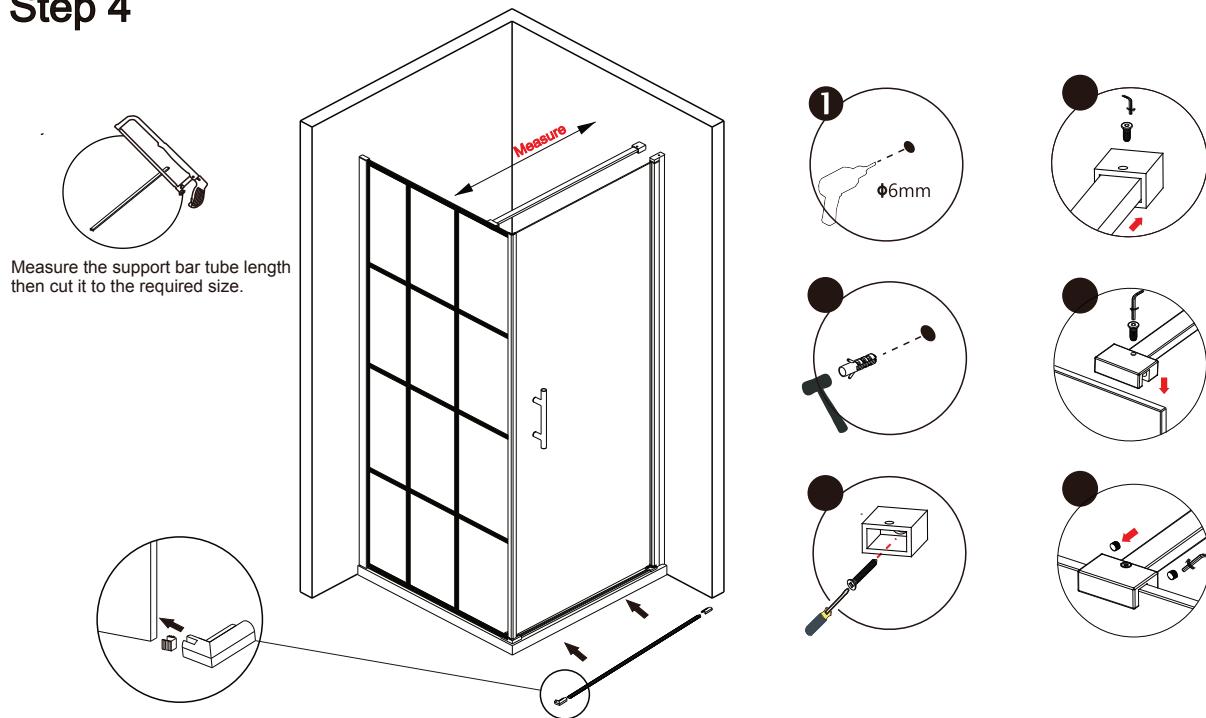

MODEL : EDDA

Step 5

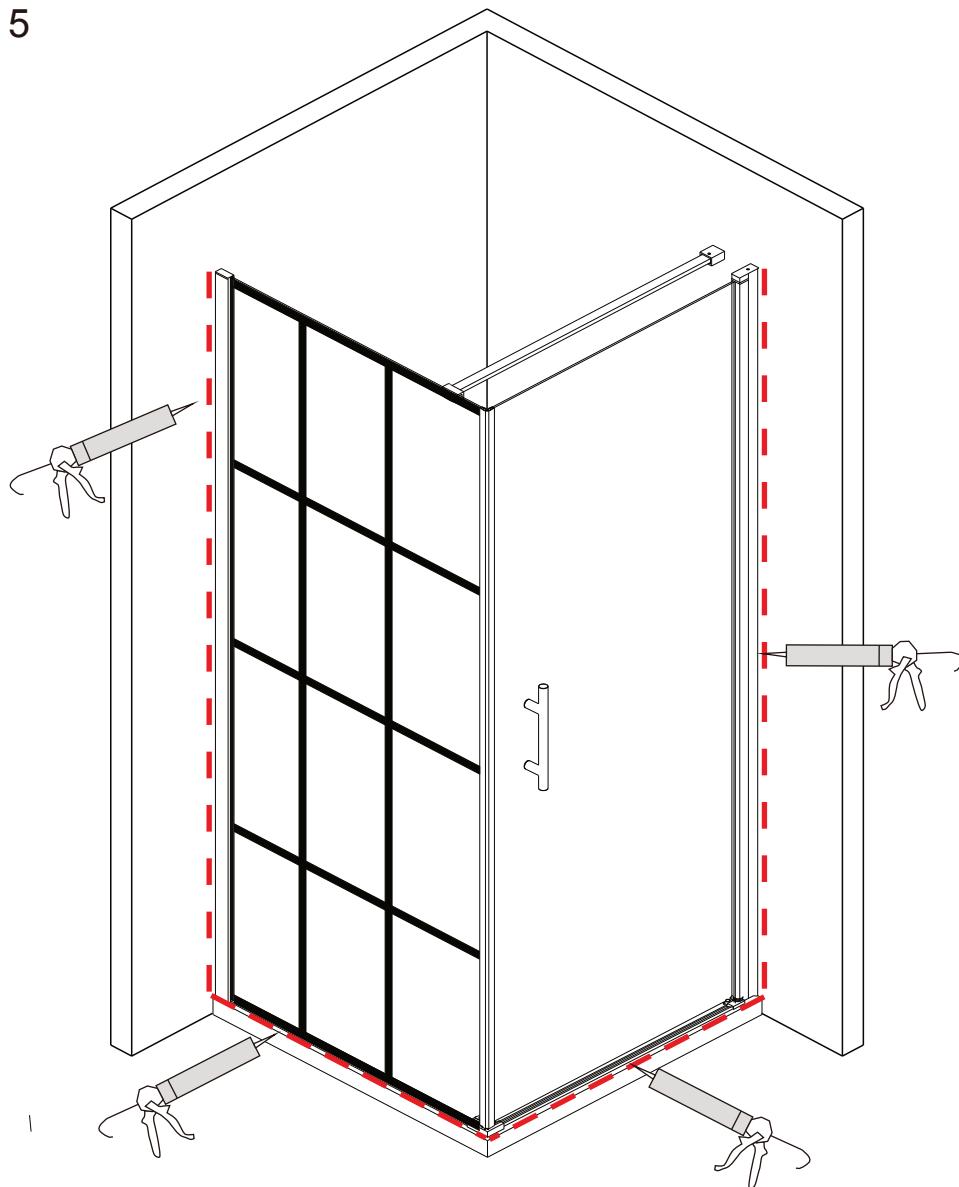

Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only

