




Tools Required

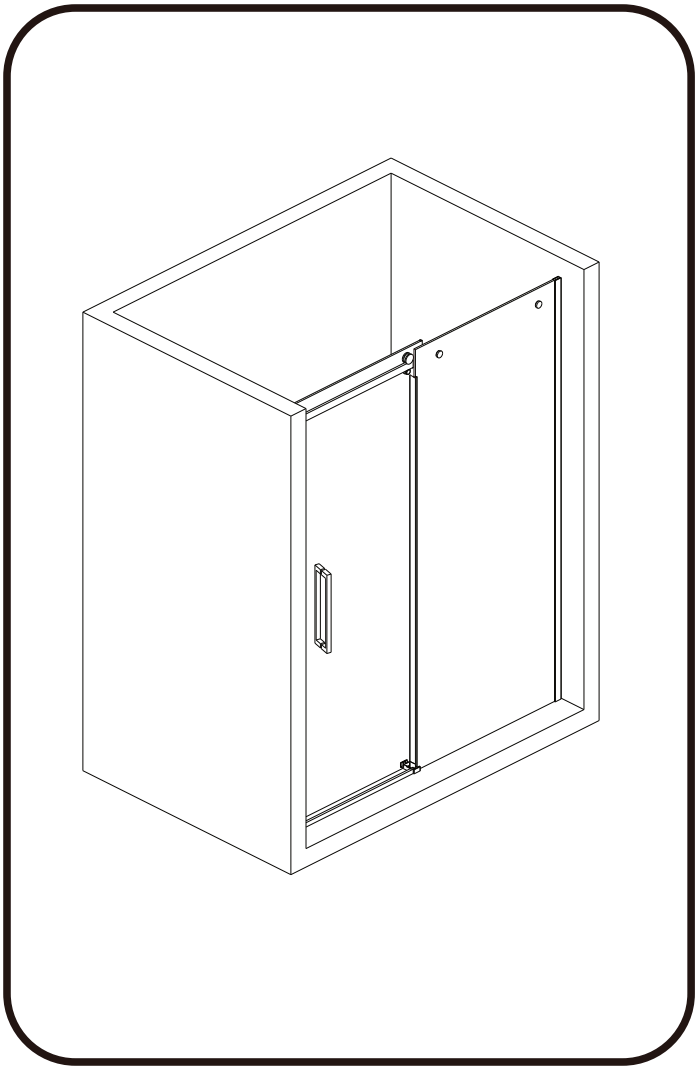

Drill




6mm Masonry Drill
3.2mm HSS Drill



Spirit level



Sealant Gun



Tape Measure



Pencil



PH2 TYPE
Screwdriver


Please not hand tools **NOT** supplied.

IMPORTANT

These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls.Hollow or stud-partition walls will require alternative
fixings.Please consult with a reputable trades person or hardware supplier for the correct type of fixing.


It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.

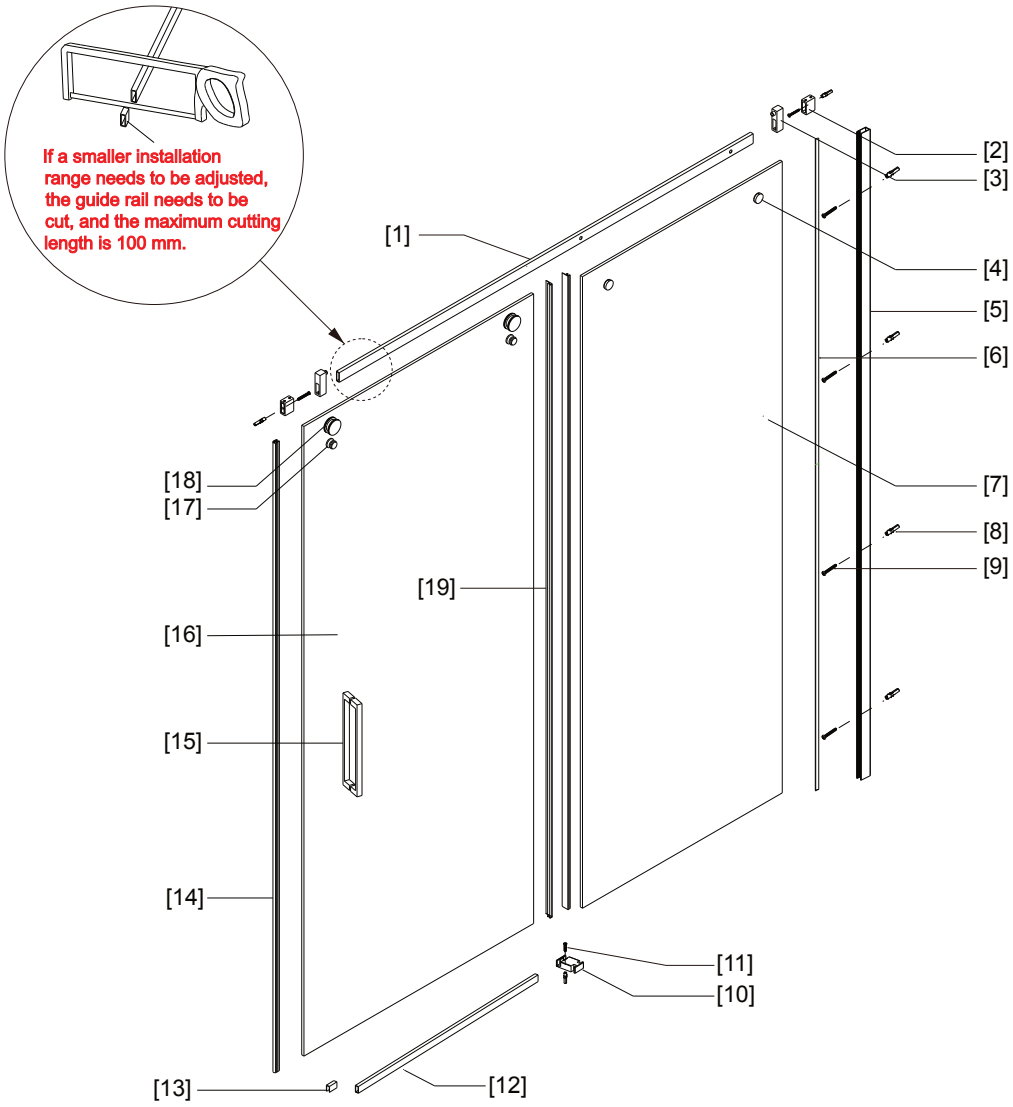


NO.	Description	Qty	NO.	Description	Qty
1	Square tube guide rail	1	11	4*30 Self tapping screw	1
2	Wall base	2	12	Blocking aluminum	1
3	Anti-collision component	2	13	Decorative coverB	2
4	fixed block	2	14	Bubble rubber strip	1
5	Wall profile	1	15	Handle	1
6	Single sided adhesive strip	1	16	Moving Glass	1
7	Fixed glass	1	17	Anti jump component	2
8	Expansion sleeve	5	18	Roller	2
9	4*30 Self tapping screw	4	19	waterproof strip	2
10	Bottom slider	1			


Installation Steps

Step 1

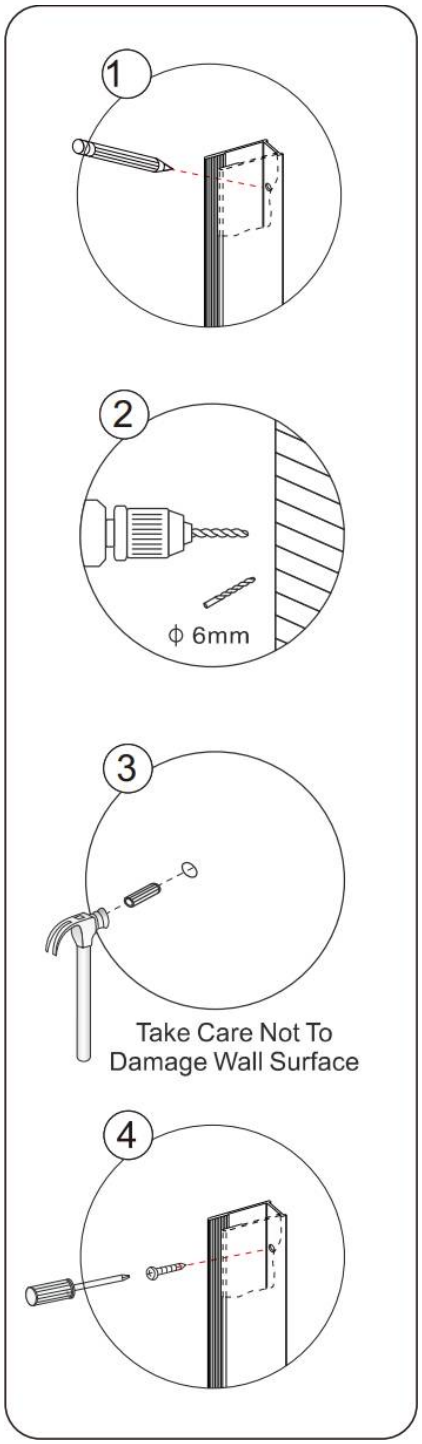


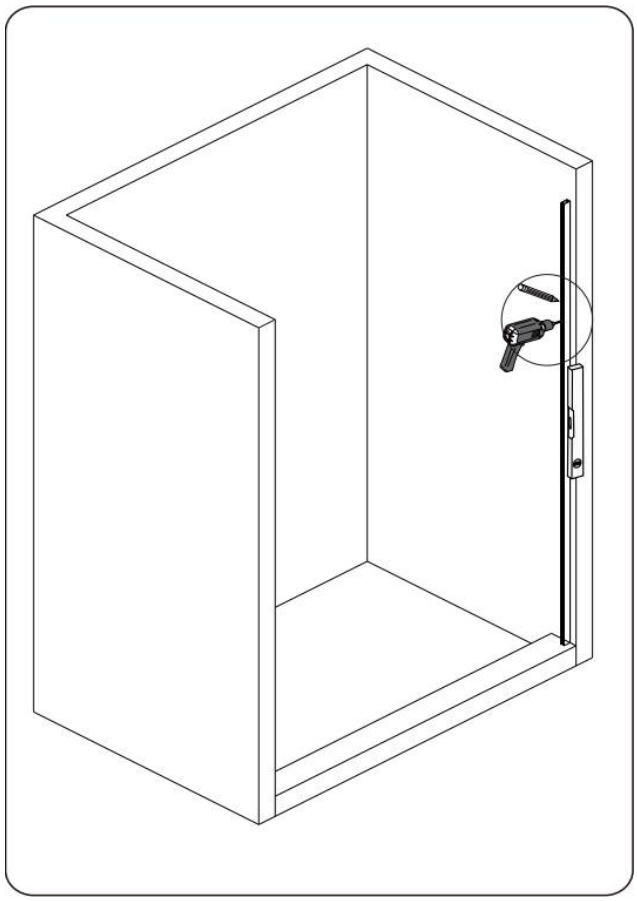


Step 2

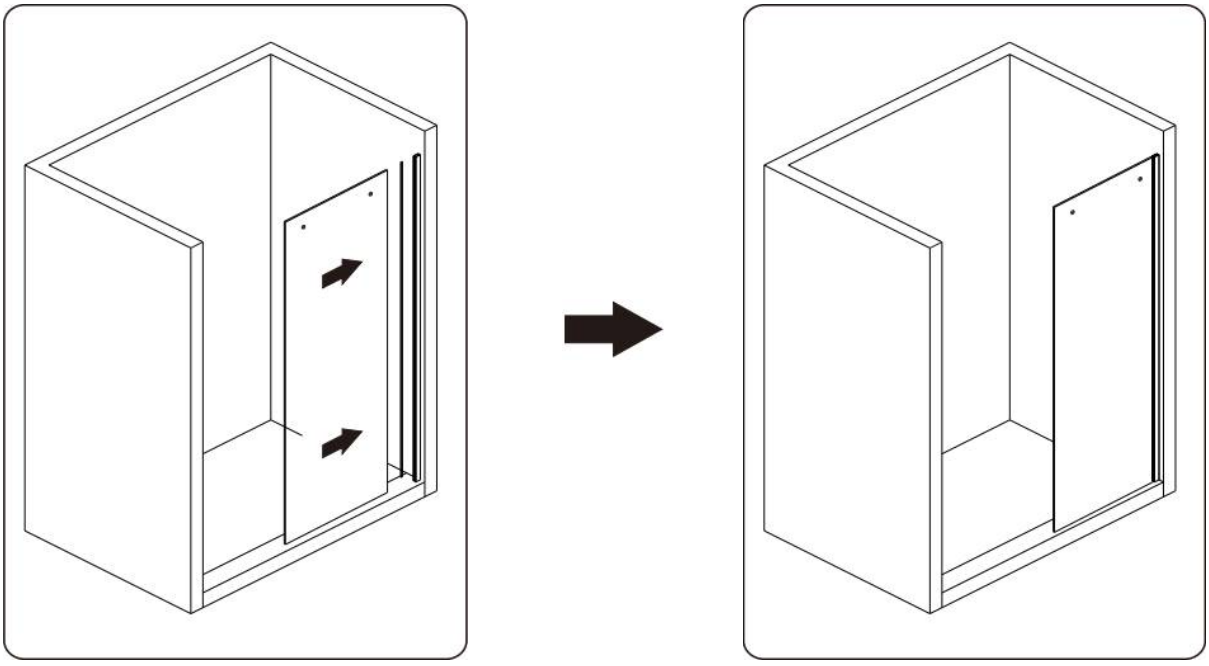


Step 3

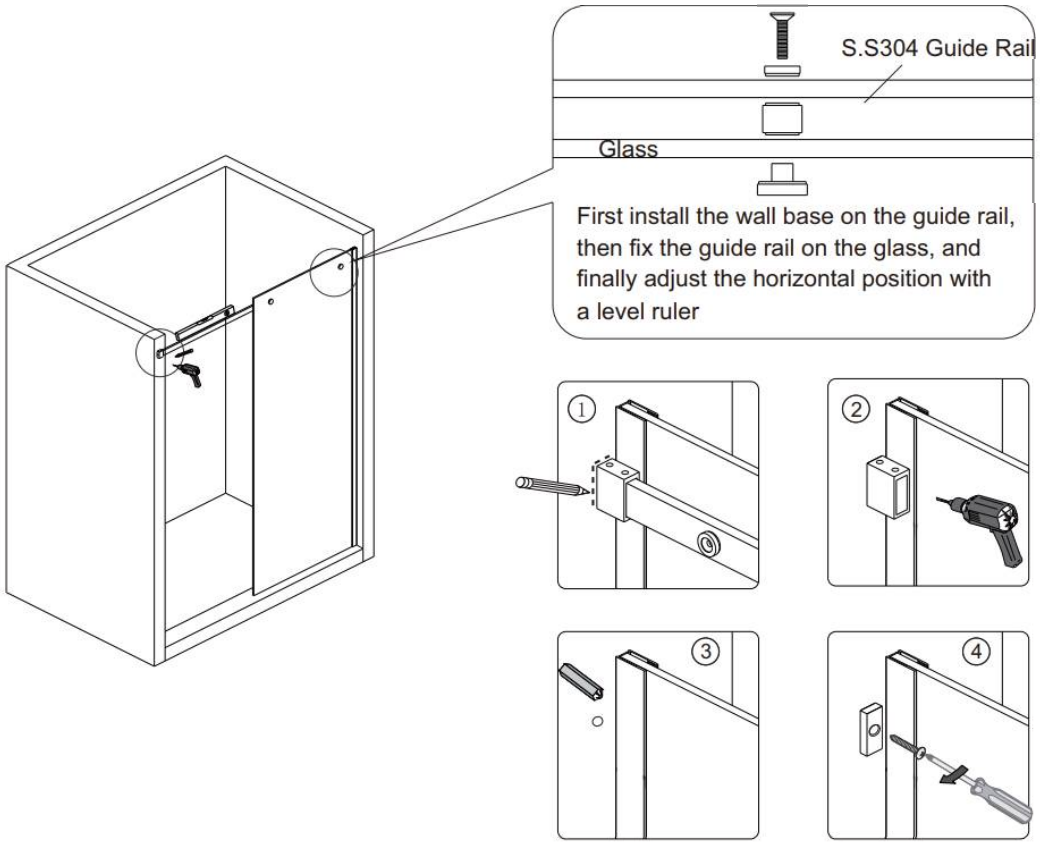
S.S304 Guide Rail
Glass
First install the wall base on the guide rail, then fix the guide rail on the glass, and finally adjust the horizontal position with a level ruler
①
②
③
④


Step 4

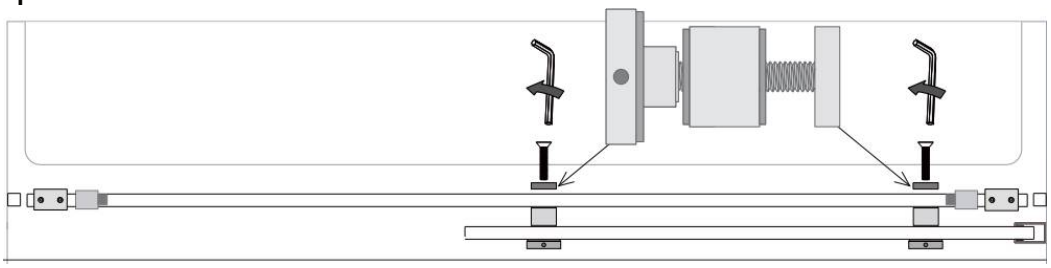


Install the anti-collision block onto the guide rail first,
and then lock the guide rail and wall base tightly

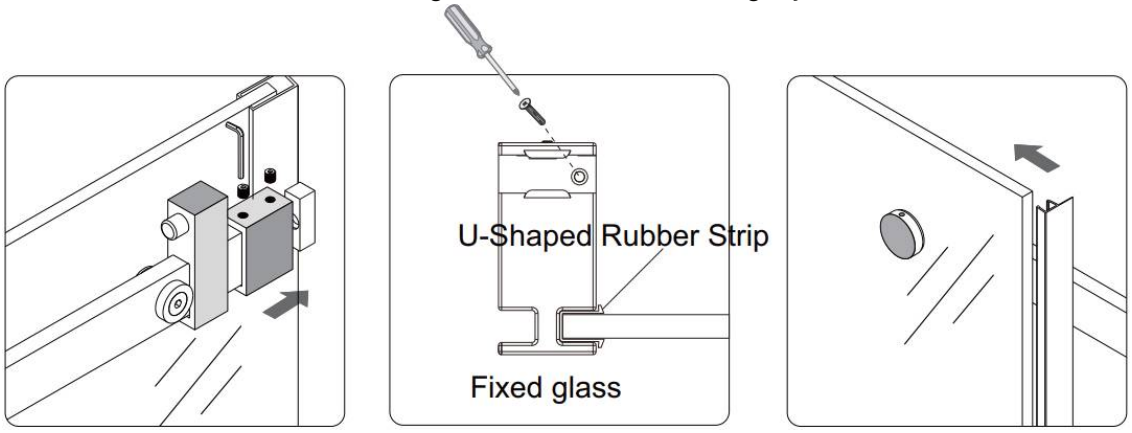


Step 5

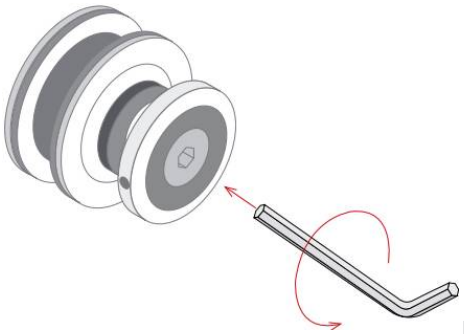


Disassemble the pulley and
install it on the glass

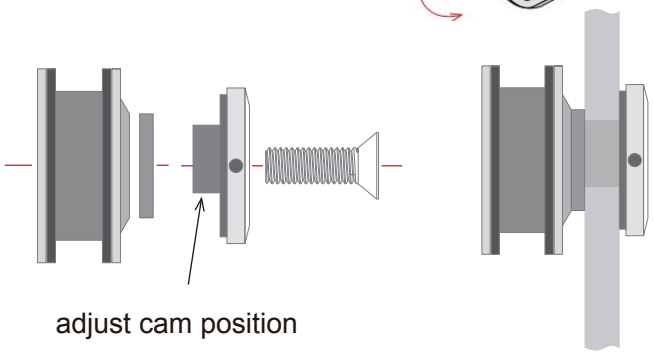


adjust cam position

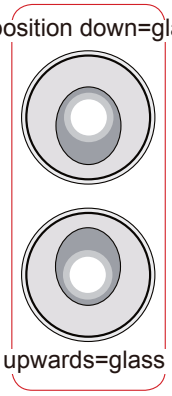


Step 6

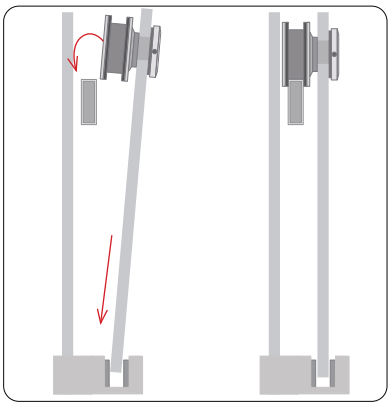


Hang the door glass on the guide rail.

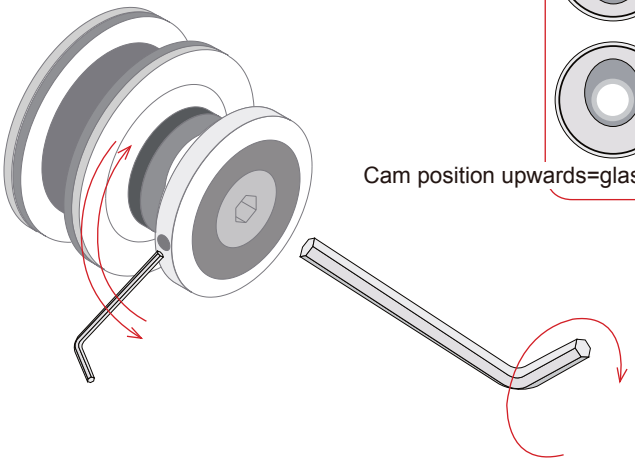


Hang the door glass onto the guide rail

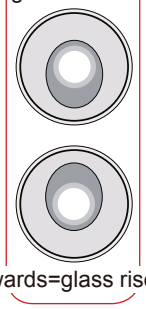


Cam position upwards=glass rises upwards

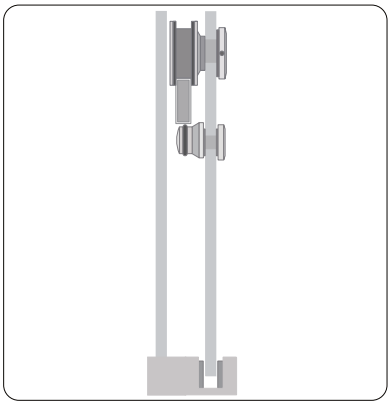


Install anti jump components

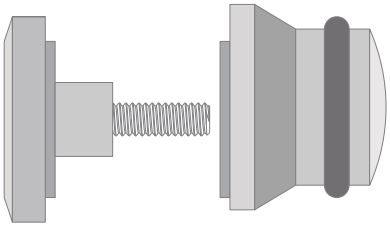

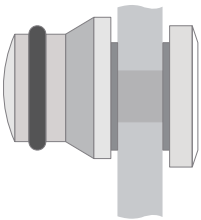



Cam lobe down =piece up




Cam lobe up =piece down


Step 7

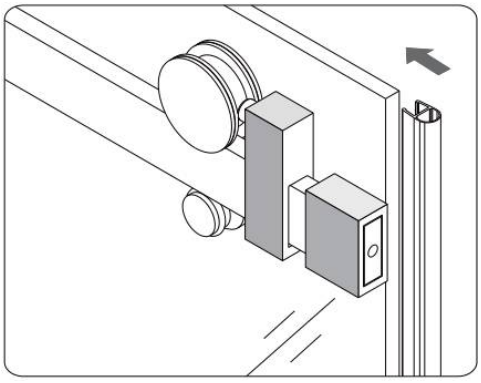


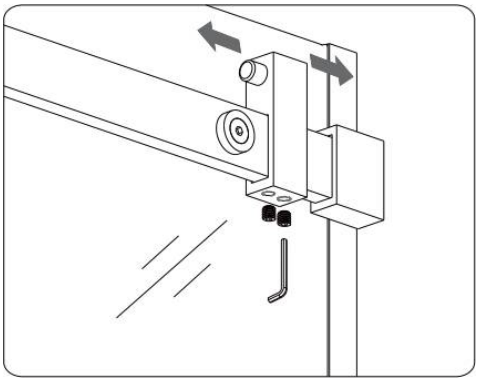



Step 8

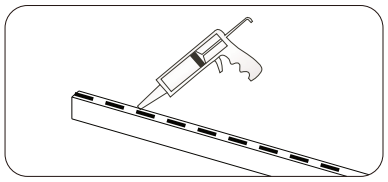

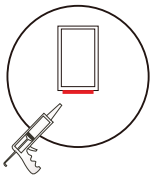


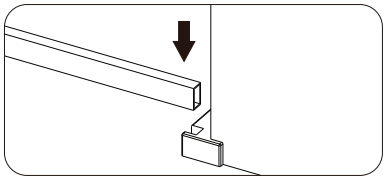


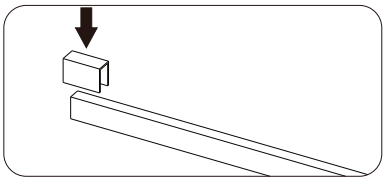

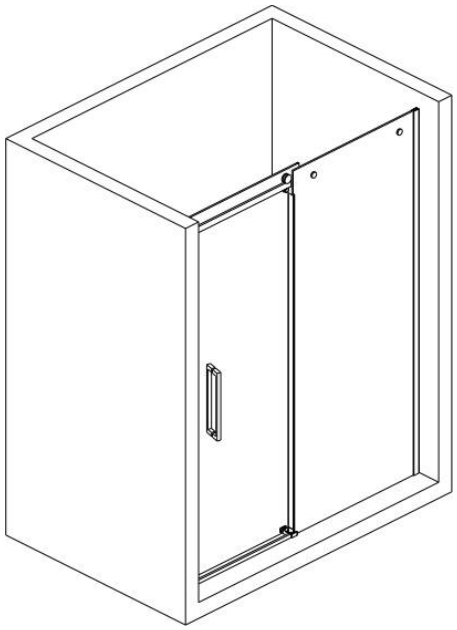

Step 9

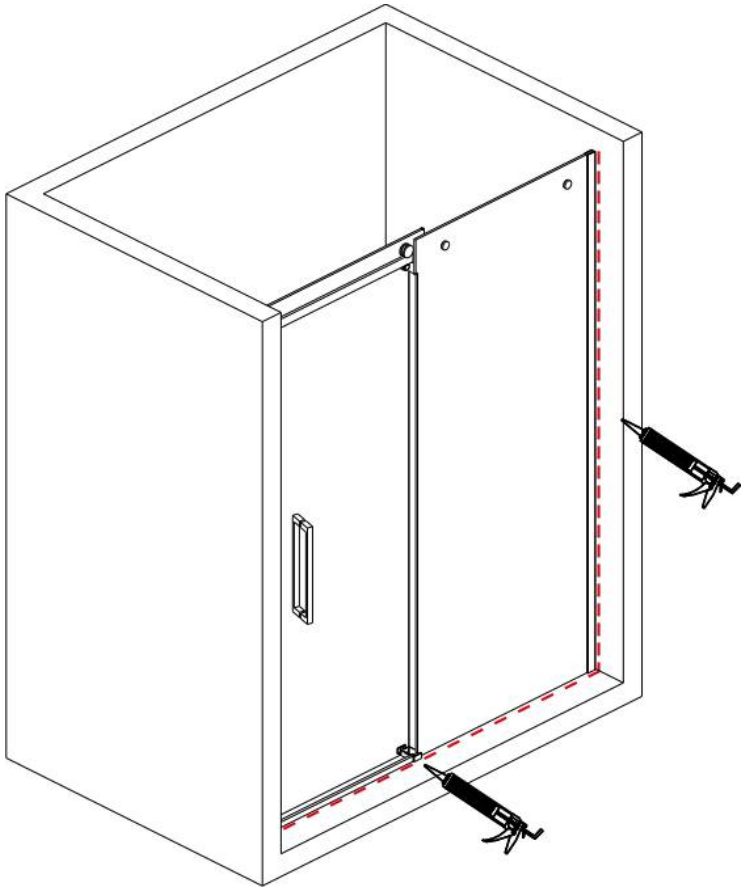

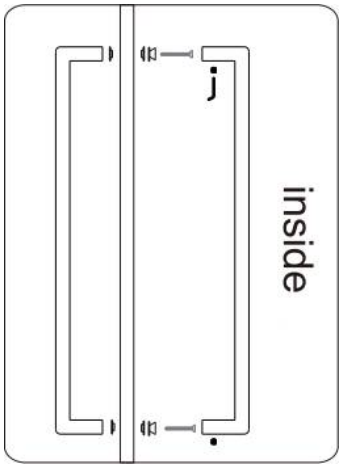



Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only