
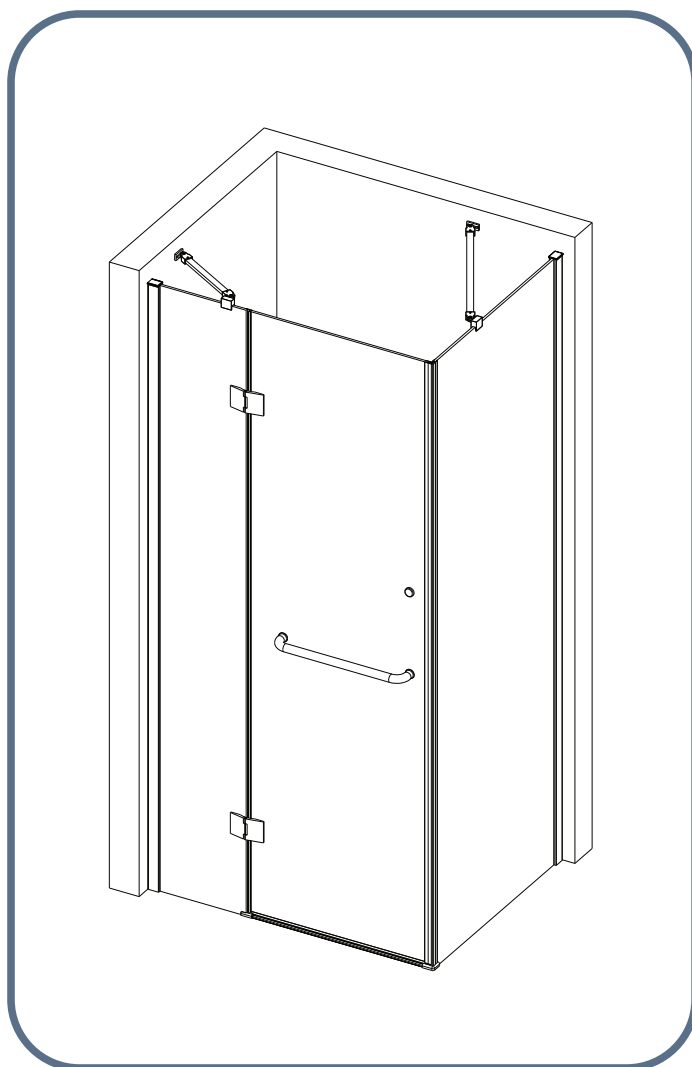


Model No: Nyx Hinged Door

INSTALLATION INSTRUCTIONS



Tools Required

**Drill****6mm Masonry Drill
3.2mm HSS Drill****Spirit level****Sealant Gun****Tape Measure****Pencil****PH2 TYPE
Screwdriver**

Please not hand tools NOT supplied.


IMPORTANT

These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls. Hollow or stud-partition walls will require alternative fixings. Please consult with a reputable trades person or hardware supplier for the correct type of fixing.

It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.






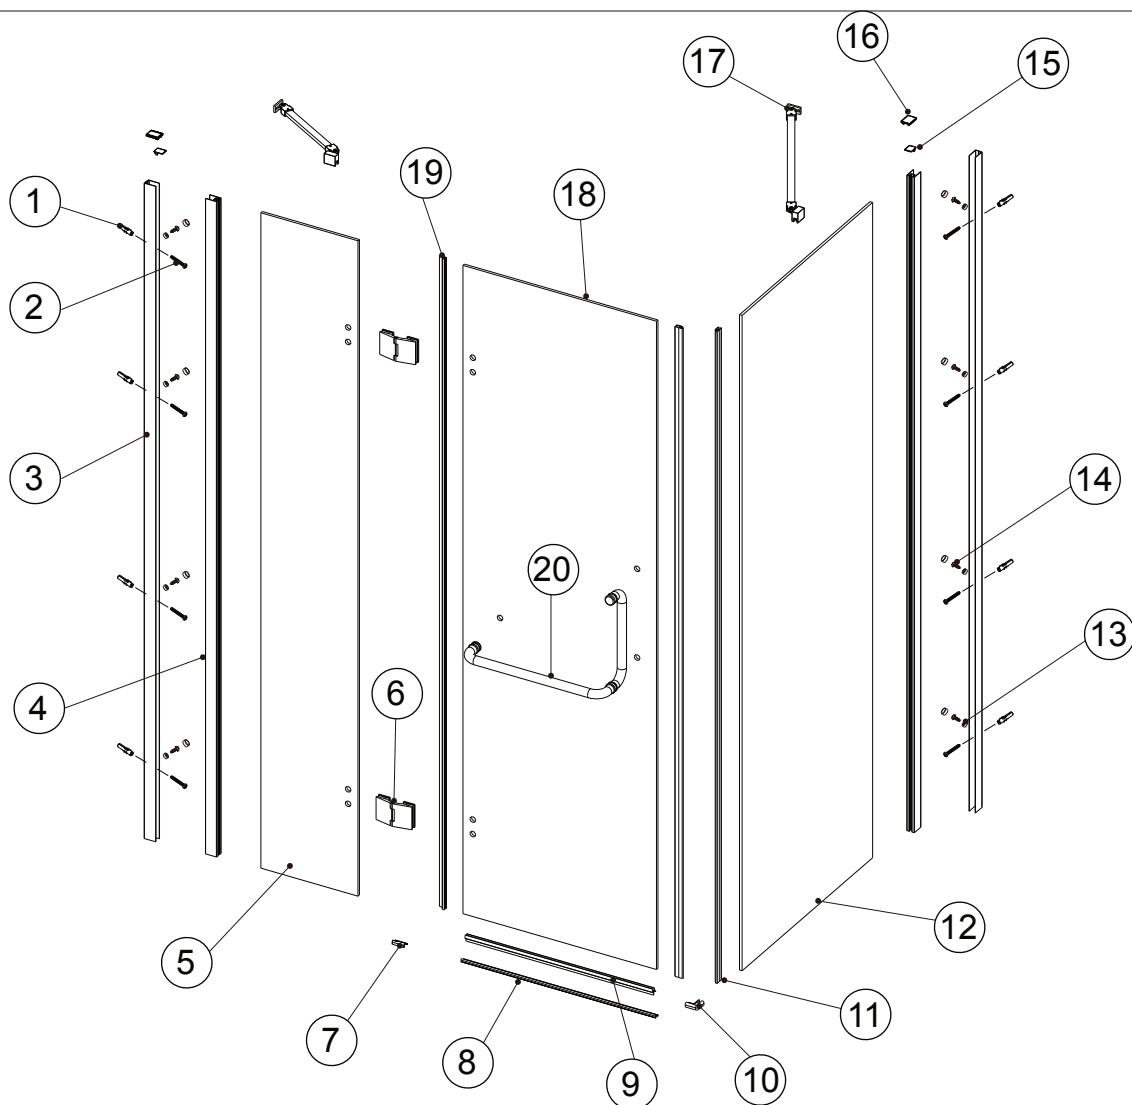


NO.	Description	Qty	NO.	Description	Qty
1	Expansion Sleeve	8	11	Magnetic Stripe	2
2	4*30 Self-Tapping	8	12	Side Panel Fixed Glass	1
3	Wall Profile	2	13	Turnbuckle cover A + B	8
4	Wall Jamb	2	14	4*10 Self-Tapping	8
5	Fixed Glass	1	15	Cover for wall profile	2
6	Hinge	2	16	Cover for wall jamb	2
7	Bottom water proof trim Cover	1	17	Oblique Tension Rod	2
8	Bottom water proof Aluminum	1	18	Moving Glass	1
9	Bottom water proof PVC strip	1	19	Waterproof PVC Strip	1
10	Corner Trim Cover	1	20	Handle	1






Installation Steps

Step 1

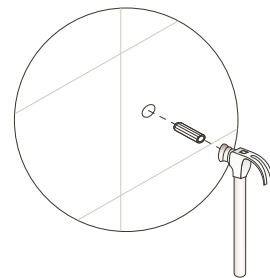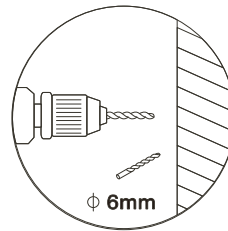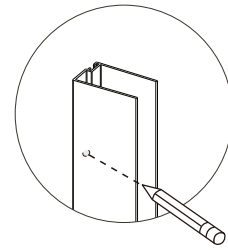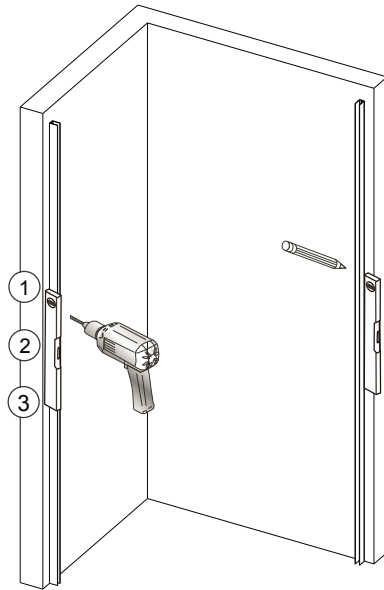


Step 2


Before installation, the glass must be sealed with glass glue and wait for 24 hours for it to dry thoroughly.

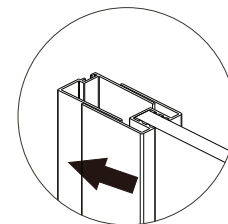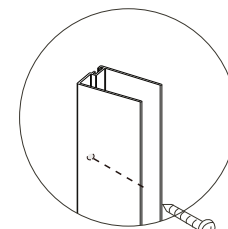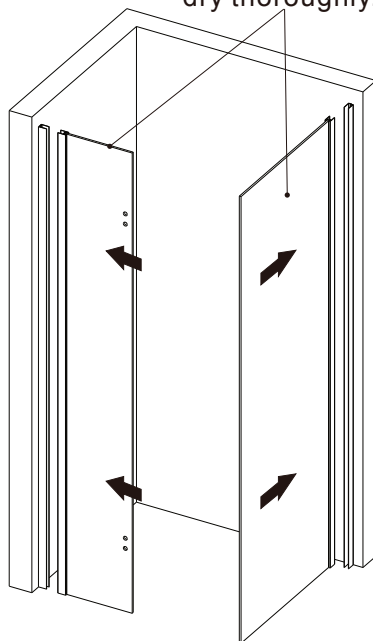



Step 3

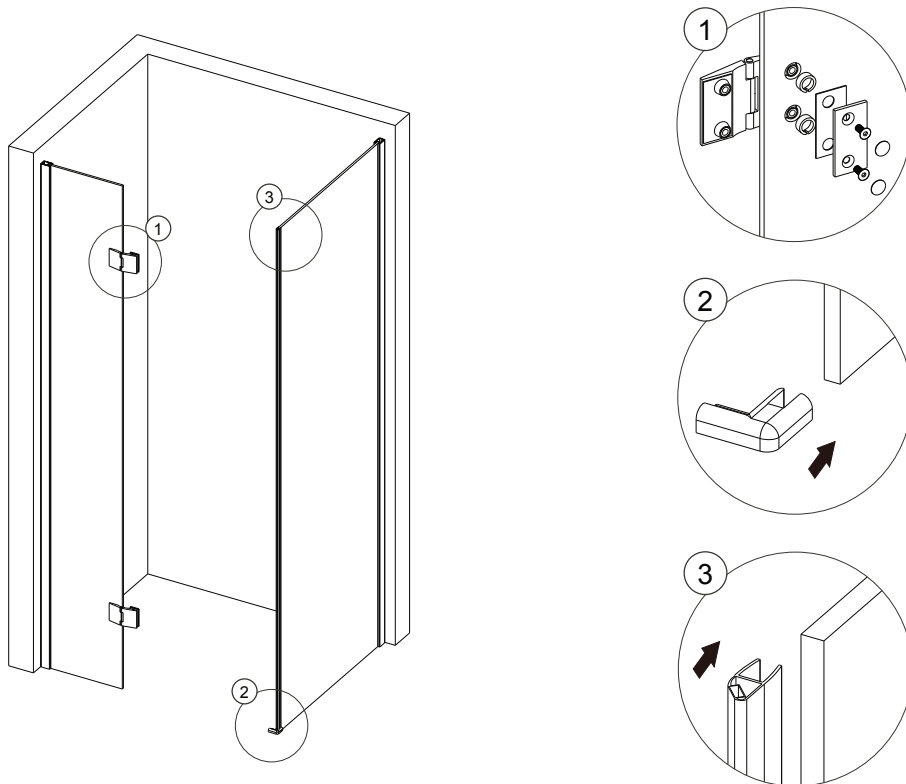

Step 4


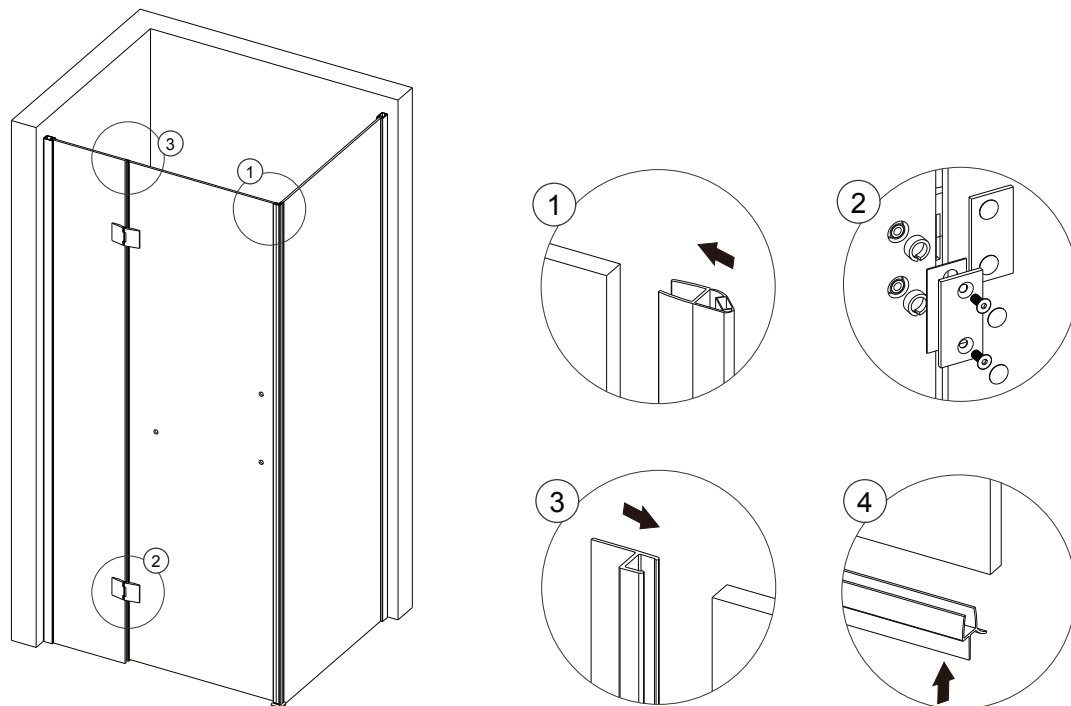


Step 5

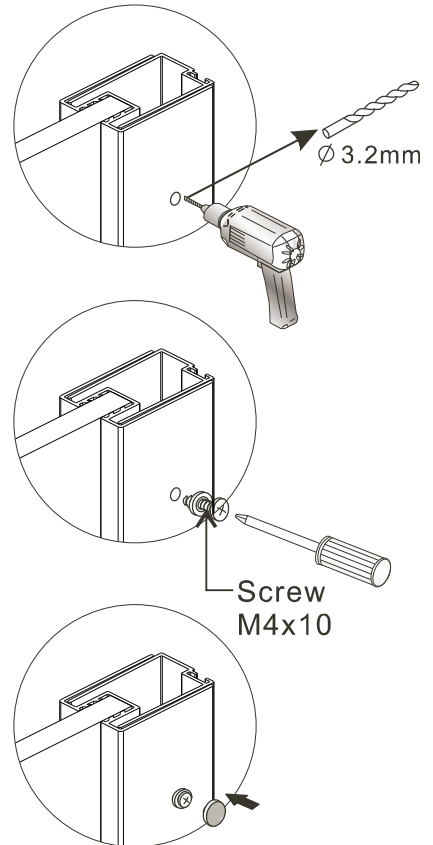
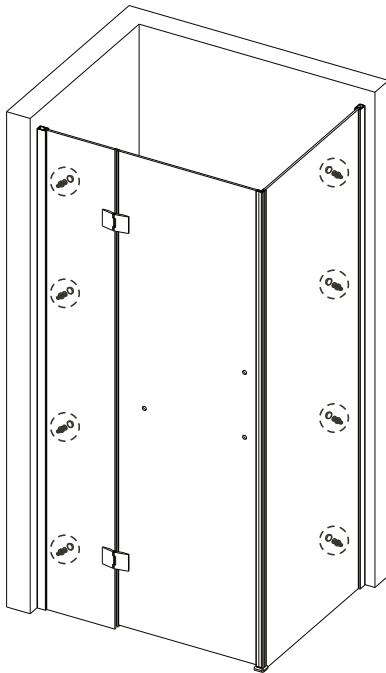


View from inside



Step 6

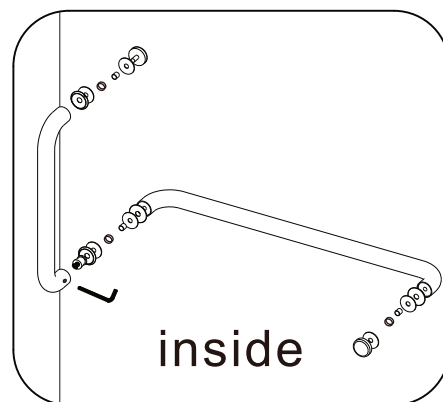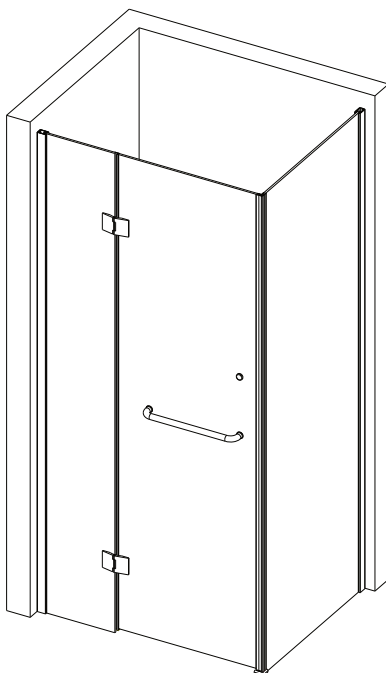



Step 7

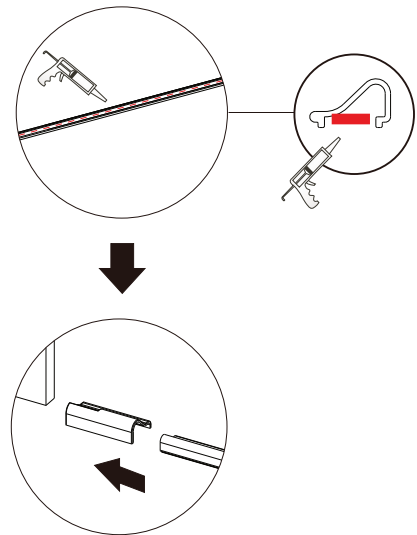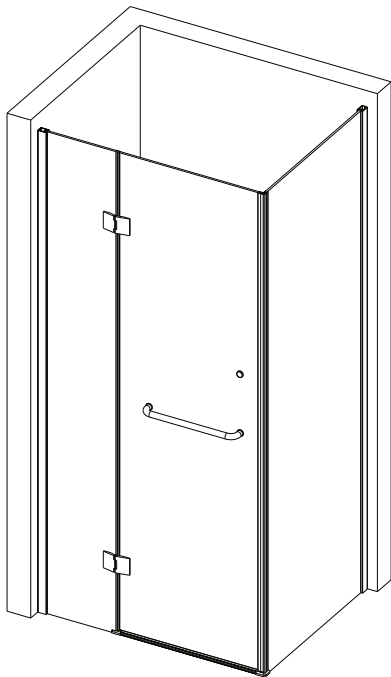

Step 8

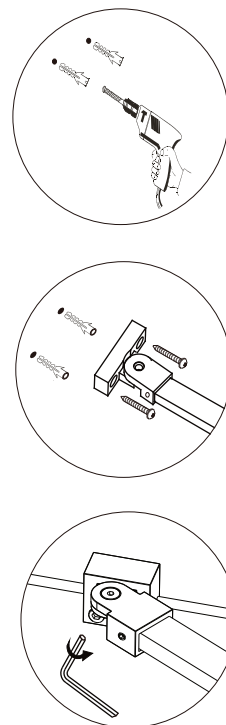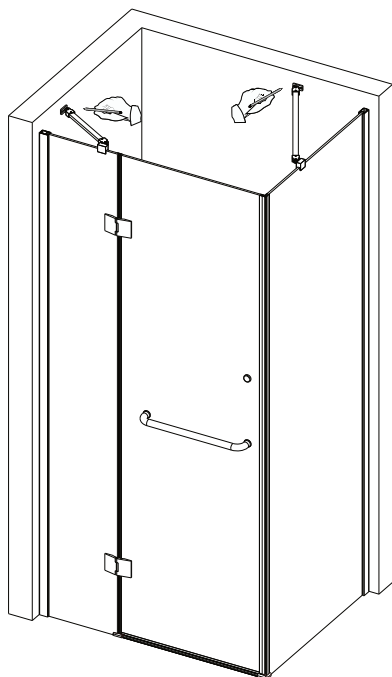

Step 9

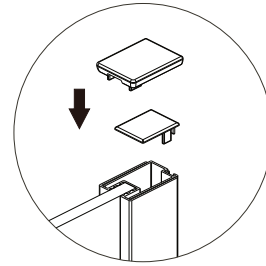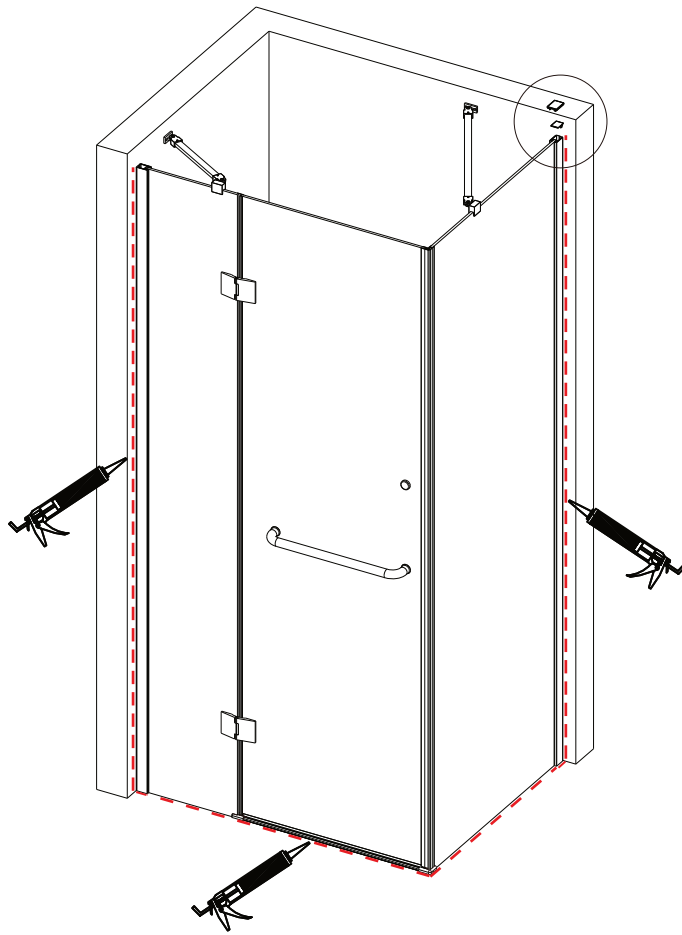

Allow 24 hours for silicone to **dry** before use.

Silicone on the outside edge only

