


ALCOVE BATHTUB


INSTALLATION INSTRUCTIONS

1

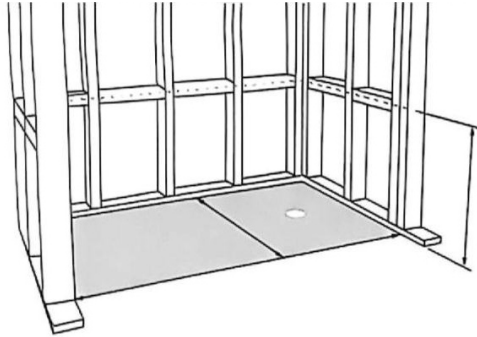


First ensure that the subfloor is level. If needed, level subfloor with leveling compound or mortar over the entire area of installation.

2

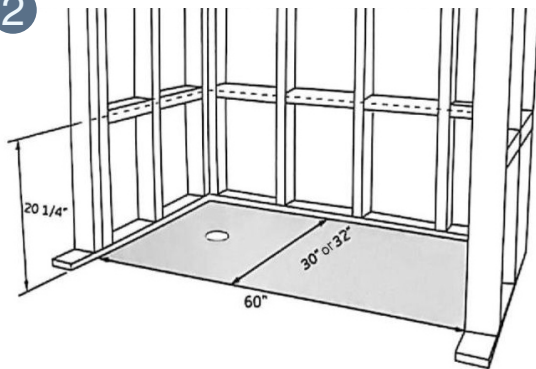


Position bathtub. Verify that the drainage pipe location matches the actual location of the bathtub drain. Remove the bathtub.

4

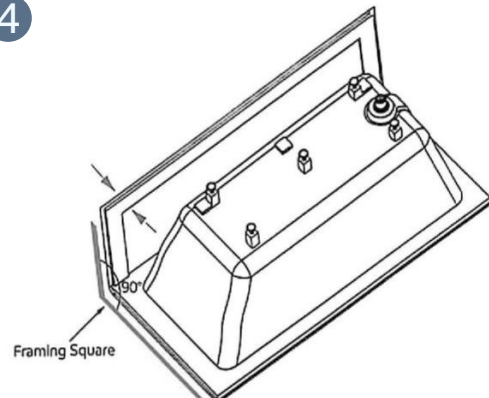


Using a framing square to gauge the angle, hold skirt at 90 degrees from top of tub.

5

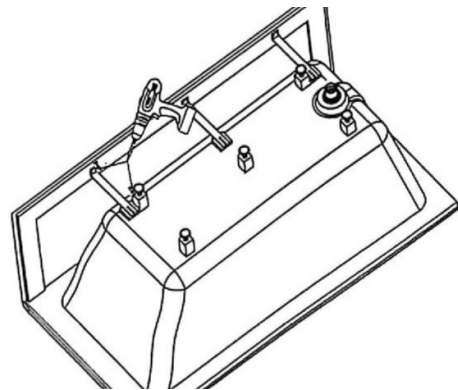

While held in place, install L-Bracket (utilizing provided screws.) Attach the flat side to the mounting block and the angled side to the reinforced skirt. **NO PRE-DRILLING REQUIRED.**


3

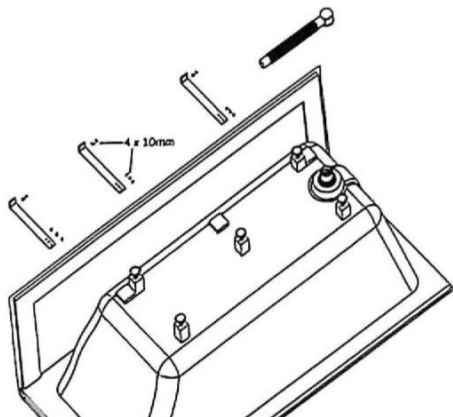

Repérez l'équerre en L et les vis fournies.


6

Installing the Flex Drain

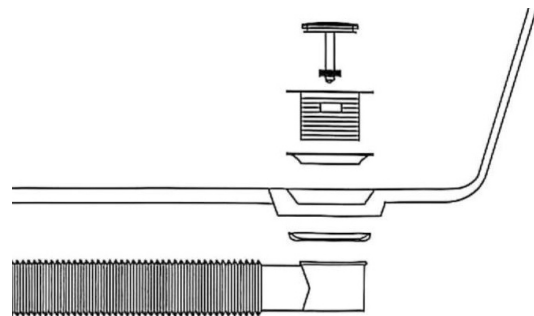


ALCOVE BATHTUB



INSTALLATION INSTRUCTIONS

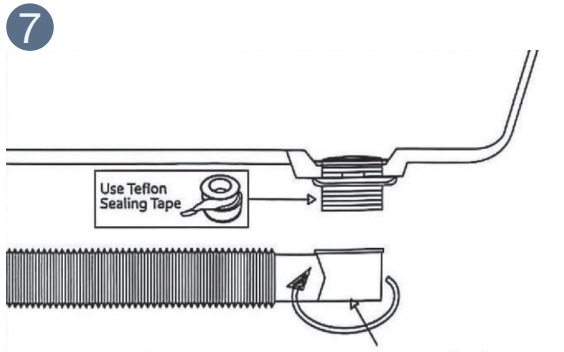


Must be tighten up to prevent water leakage

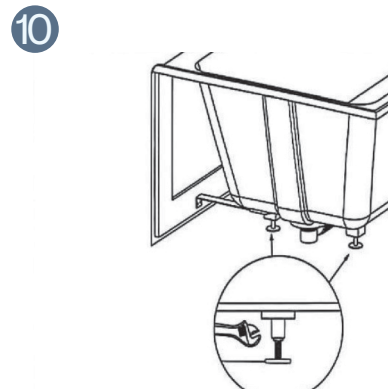


Lock the adjustment by tightening the hexagon nut.

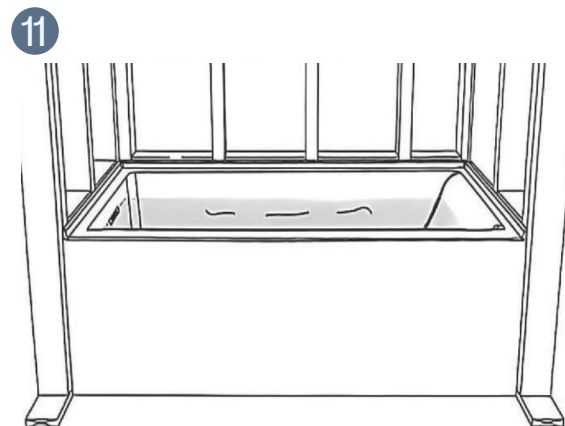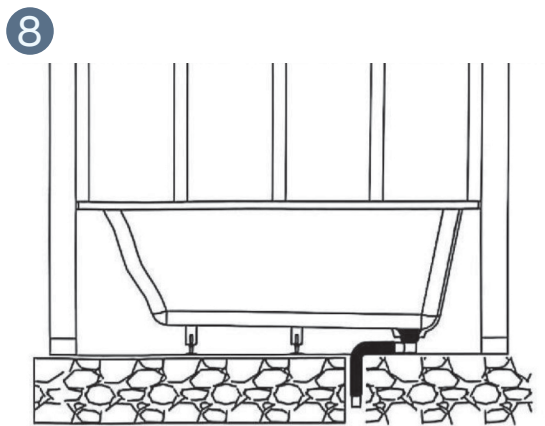

The bathtub must be tested before installation is completed. Fill the tub to the overflow and inspect it for leaks. Tighten any loose connections.

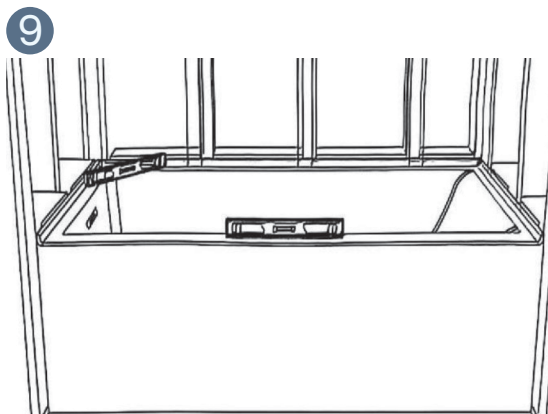

The bathtub can be levelled by adjusting the feet.

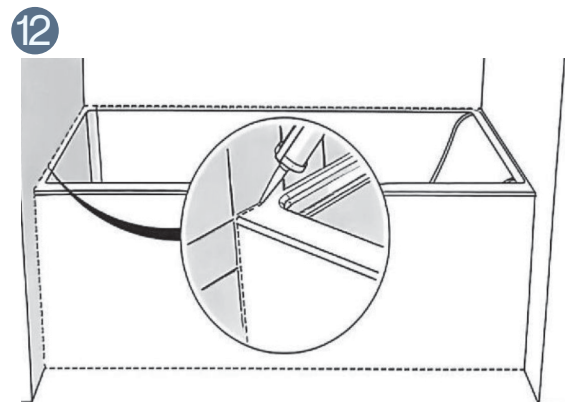

Apply silicone sealant to seal the joints between the bathtub rim and the finished wall.

