





Tools Required

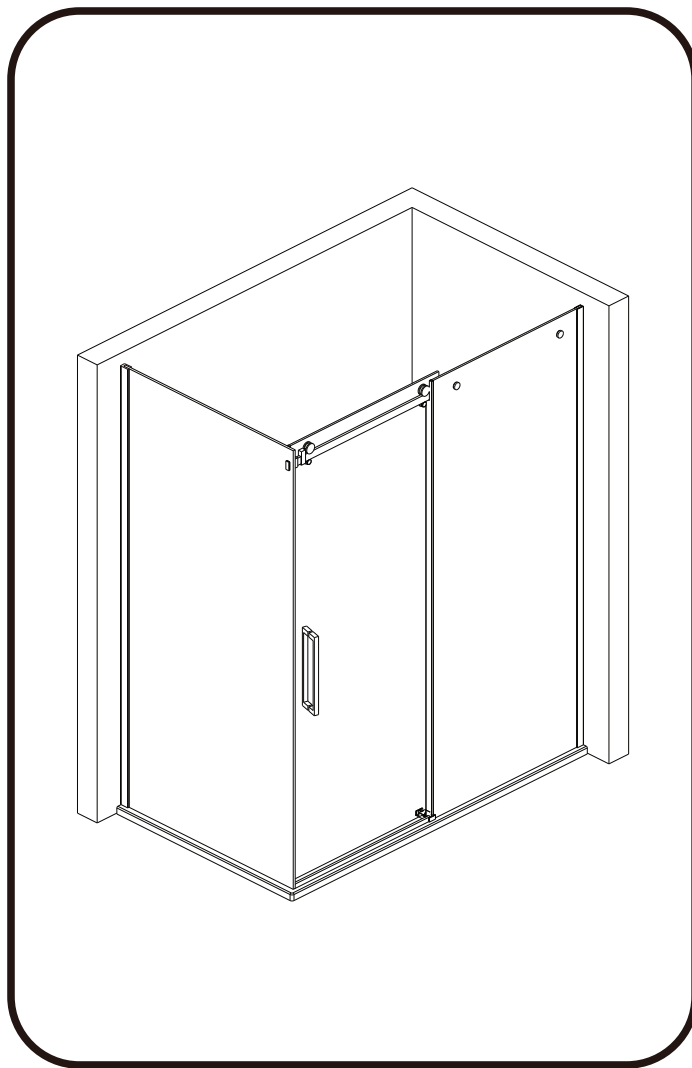

Drill




6mm Masonry Drill
3.2mm HSS Drill



Spirit level



Sealant Gun



Tape Measure



Pencil



**PH2 TYPE
Screwdriver**

Please not hand tools **NOT** supplied.


IMPORTANT

These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls. Hollow or stud-partition walls will require alternative fixings. Please consult with a reputable trades person or hardware supplier for the correct type of fixing.

It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.




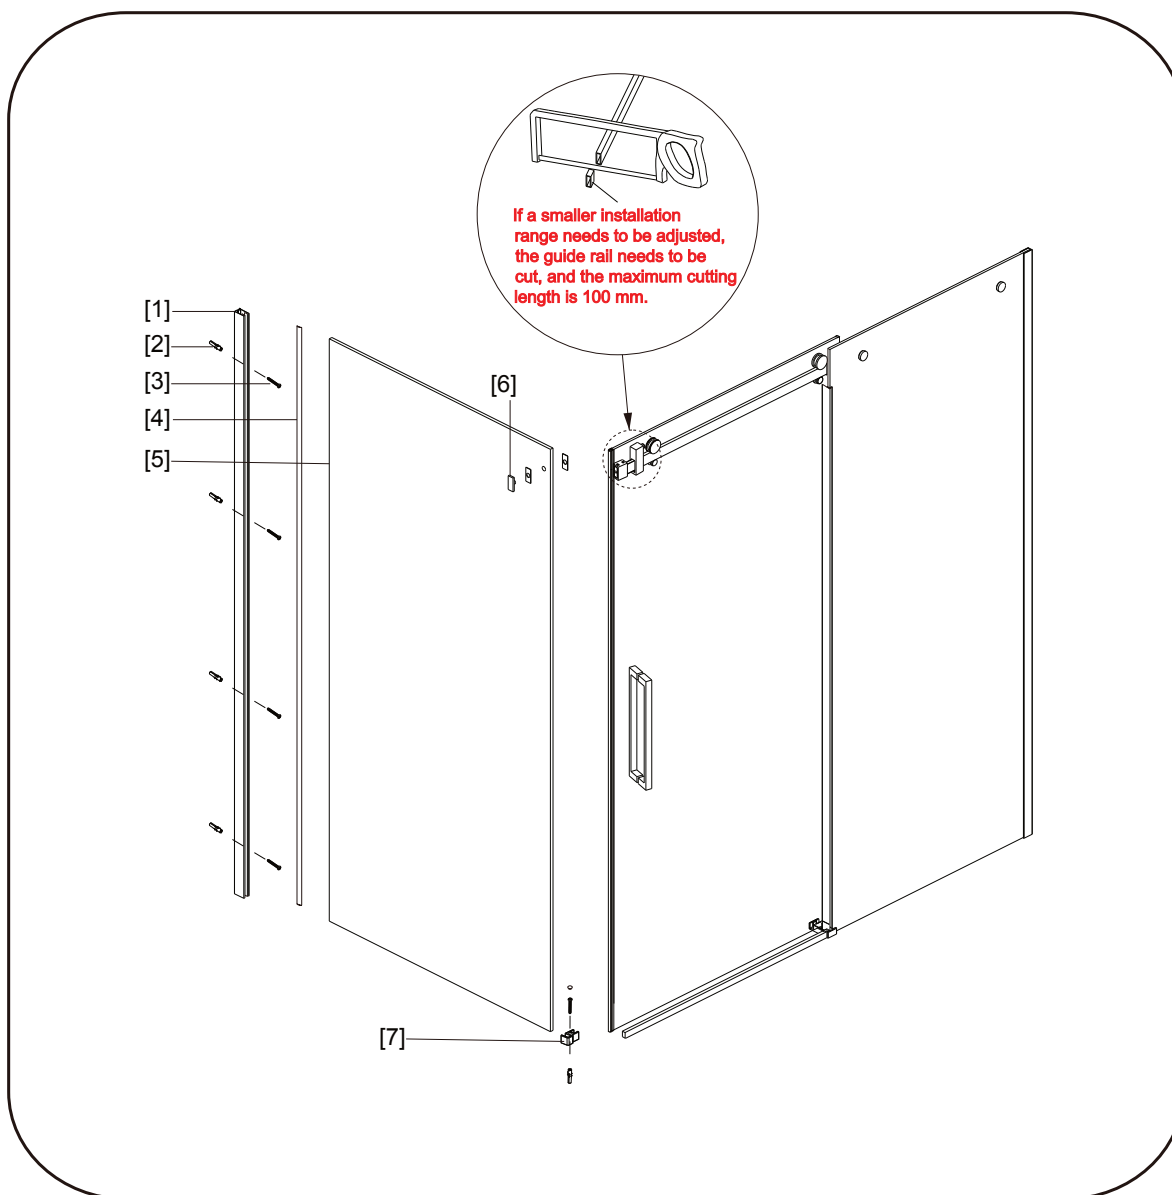


NO.	Description	Qty
1	Wall Profile	1
2	Wall Anchor	5
3	Round Screw M4x30	5
4	T Shaped Seal	1
5	Side Panel Glass	1
6	Side Panel Rail Bracket	1
7	Corner Part	1




Installation Steps


Step 1

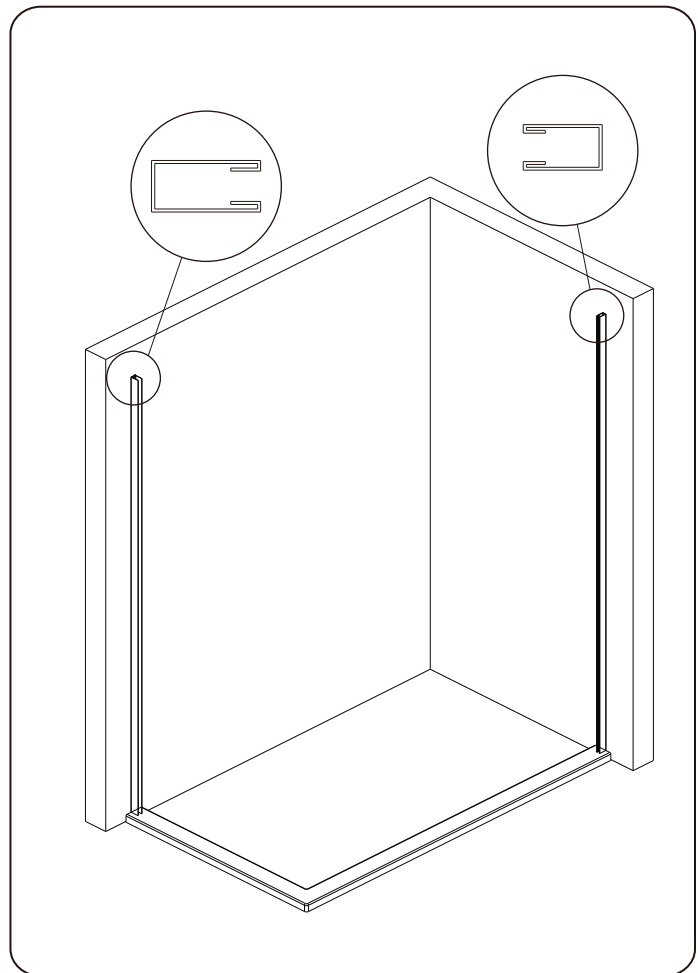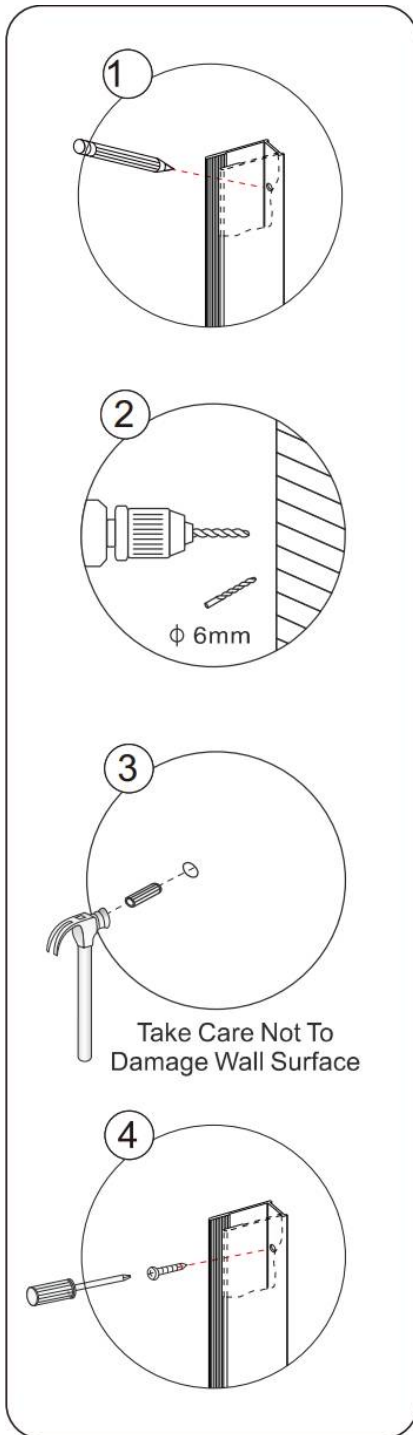


Step 2

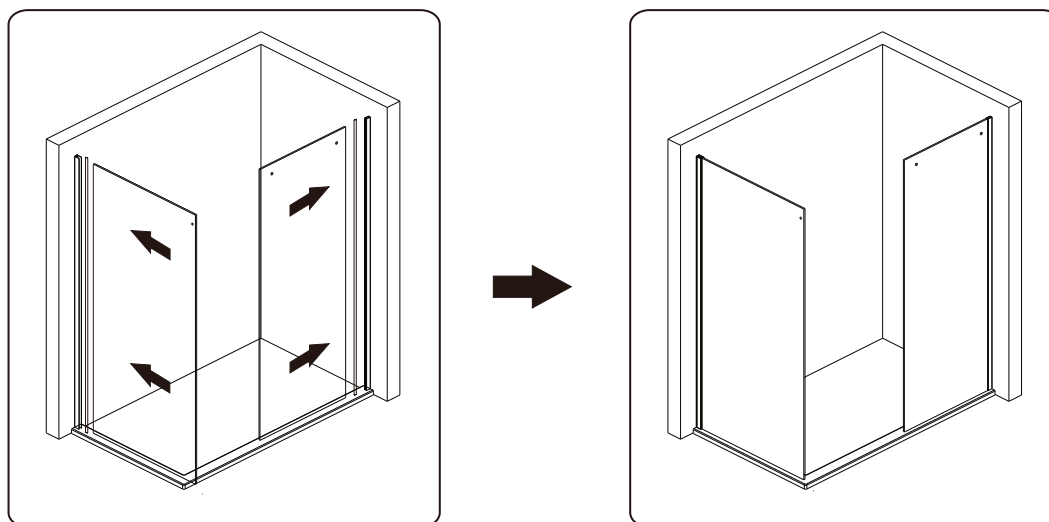


Step 3

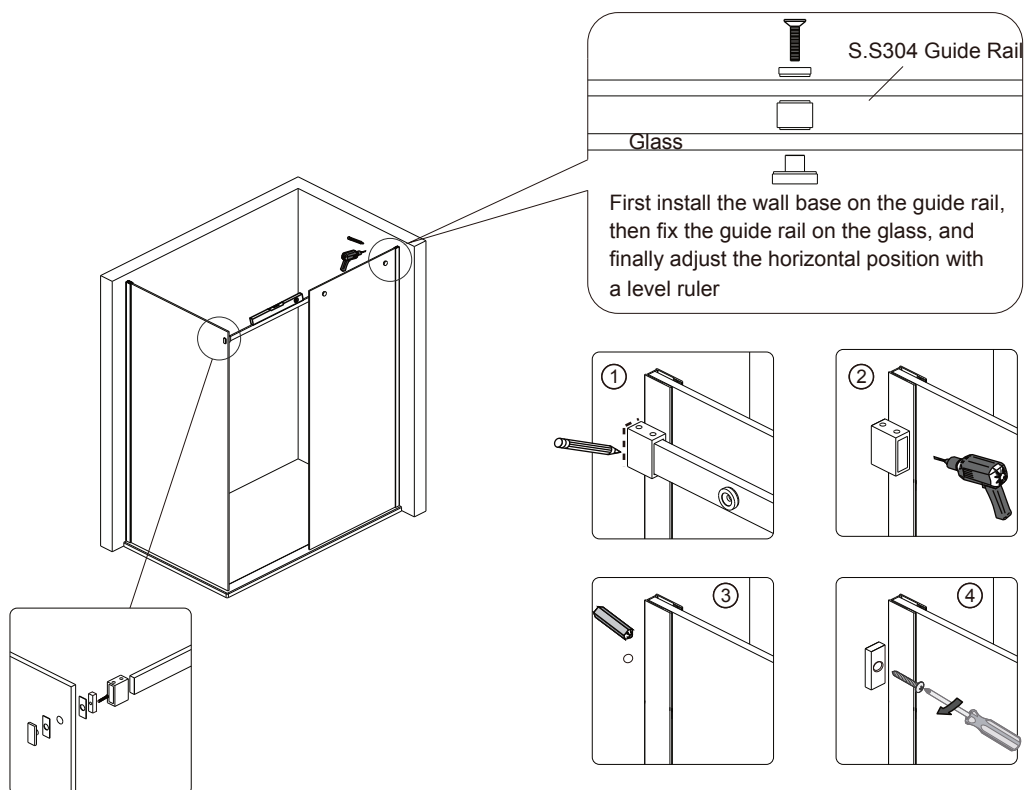

Step 4

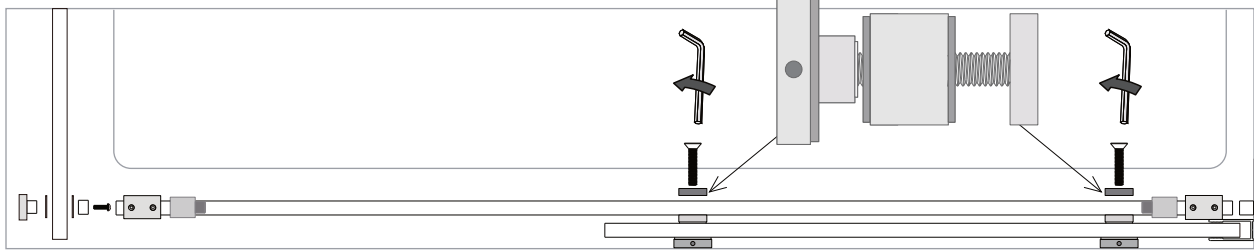


Install the anti-collision block onto the guide rail first,
and then lock the guide rail and wall base tightly

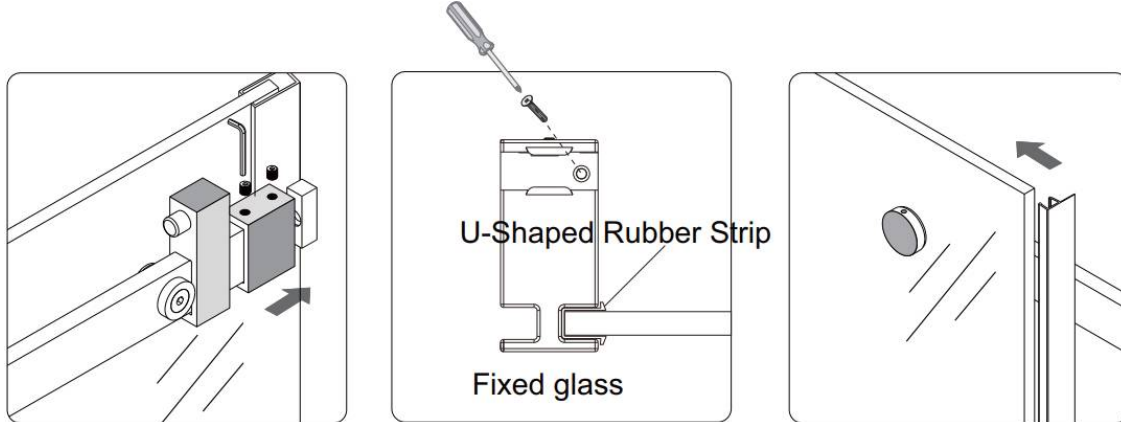

U-Shaped Rubber Strip

Fixed glass

Step 5

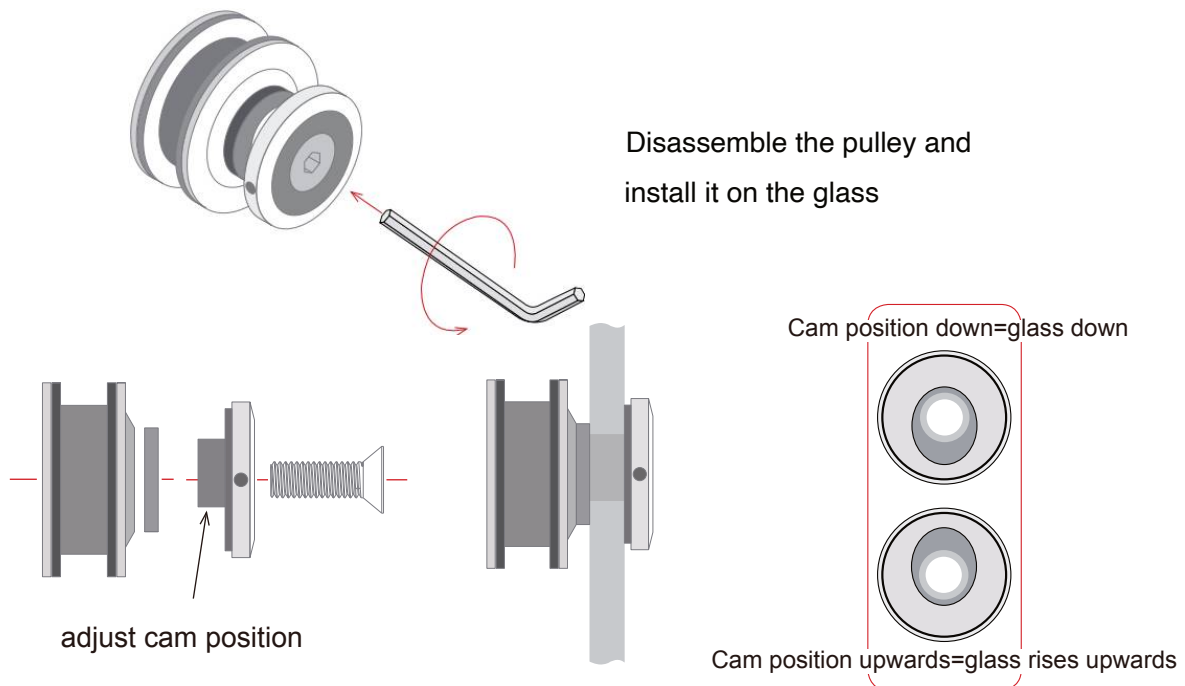

Disassemble the pulley and
install it on the glass


Cam position down=glass down

adjust cam position



Cam position upwards=glass rises upwards





Step 6

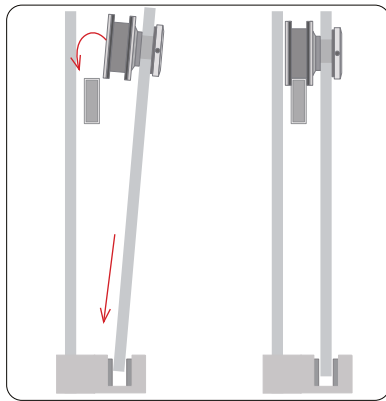

Hang the door glass on the guide rail.

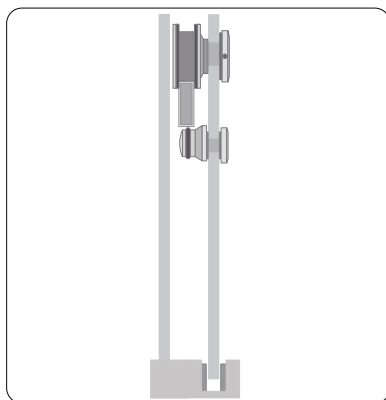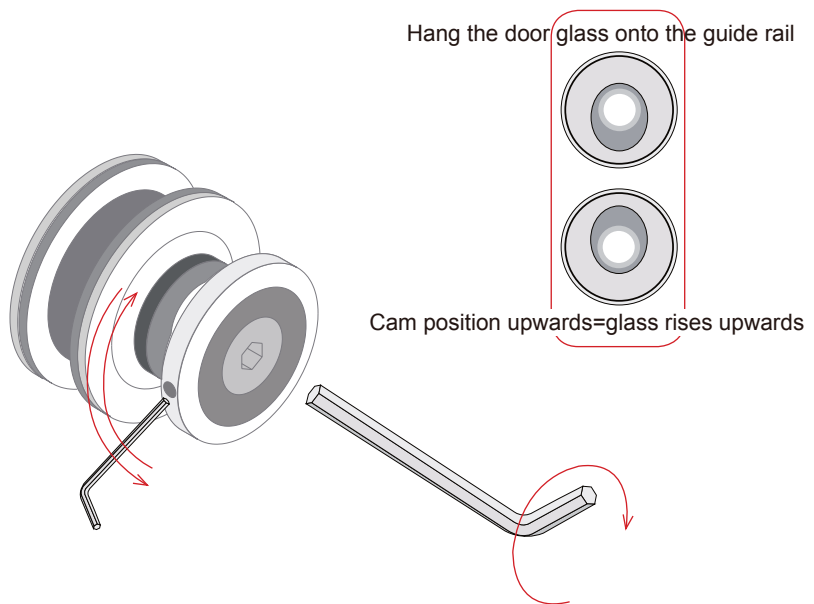

Install anti jump components

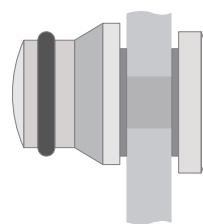
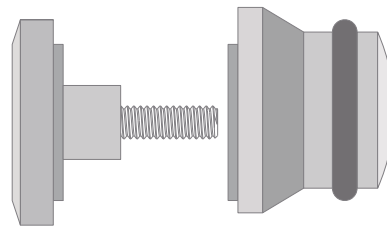


Cam lobe down = piece up






Cam lobe up = piece down








Step 7

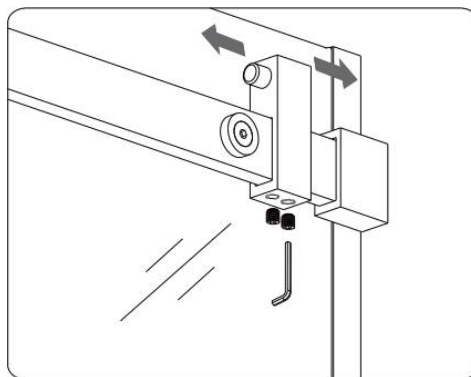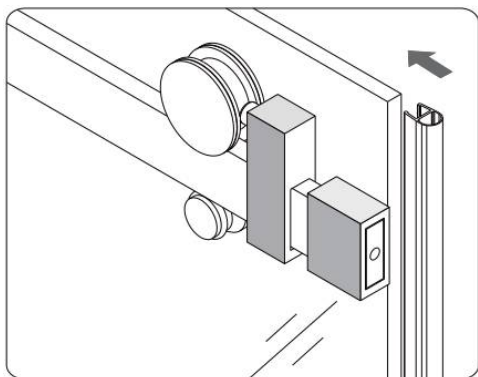


Step 8

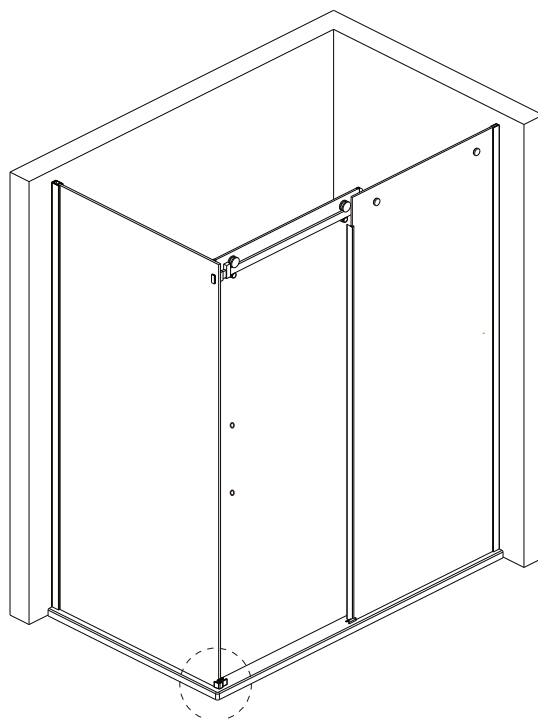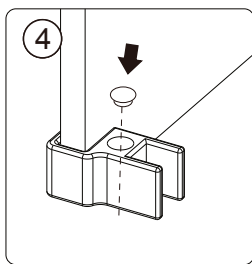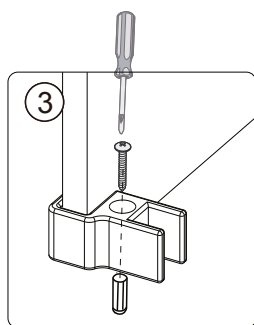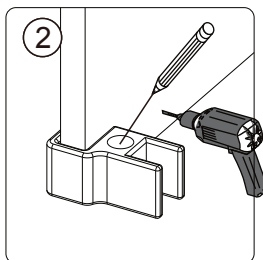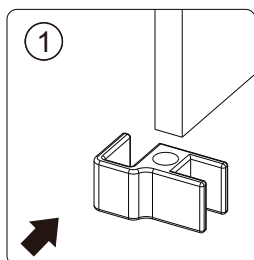



Step 9

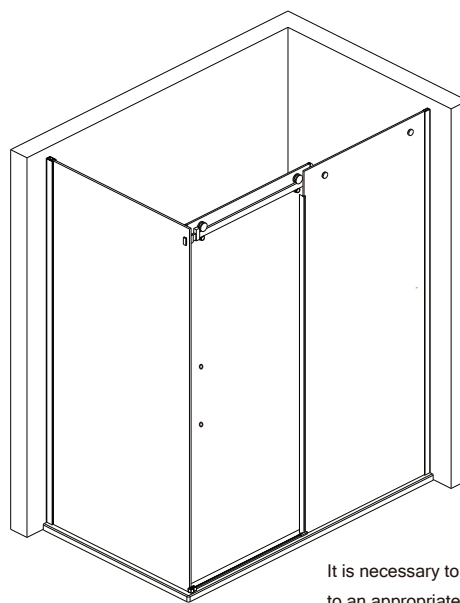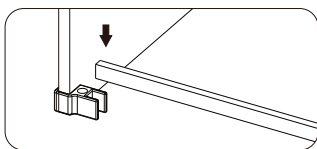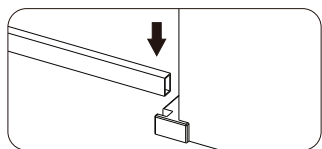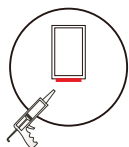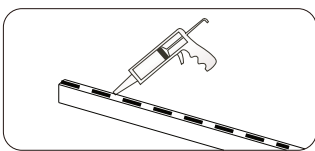

It is necessary to cut the square tube to an appropriate length.

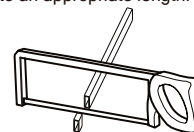

Step 10

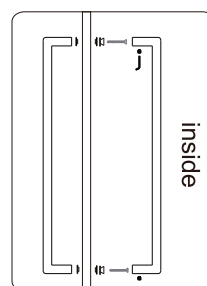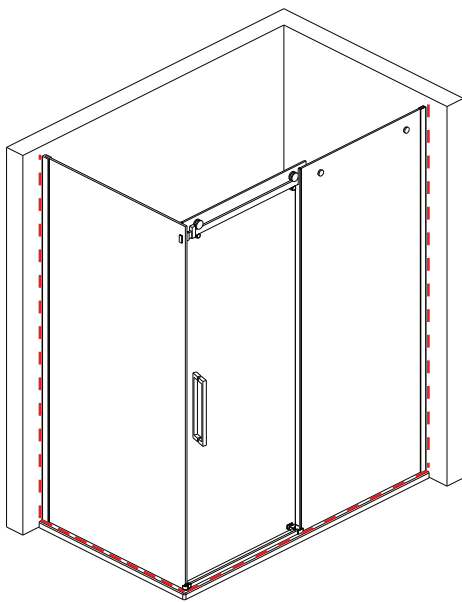

Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only

